

Configuration Manual

Please read carefully before starting. Also read the product safety information.

The converter does not require drivers in most systems. Windows, Linux, and MAC OS all have built-in drivers for this converter. However, if for some reason you need drivers, you can download them from the integrated circuit manufacturer's website. [link](#)

After connecting to the host, four ttyUSB ports will appear in Linux and COM ports will appear in Windows.

Revision #1

Created 2025-08-27 13:29:37 UTC by Yogesh

Updated 2025-08-27 15:39:56 UTC by Yogesh