

# Configuration

## RS485

For RS485-1 → "/dev/ttyS1"

For RS485-2 → "/dev/ttyS2"

---

Revision #1

Created 2026-02-03 13:44:14 UTC by Yogesh

Updated 2026-02-03 13:44:42 UTC by Yogesh