

# AG-207

Industrial IoT Gateway AG-207 powered by the OpenWRT system. With OpenWRT, you gain access to an expansive repository of over 6000 ready-to-use applications, along with the freedom to integrate your own custom solutions. This cutting-edge gateway, AG-207 features RS485 and two digital inputs. Boasting enhanced built-in memory and RAM, the Gateway unlocks limitless programming potential, empowering your projects like never before.

Please read carefully before starting. Also read the product [safety information](#).

- [General information](#)
- [Configuration Manual](#)
- [Applications](#)
- [Safety information](#)

# General information

Download technical specification

[Technical Specification](#)

## Model selection

Different Gateway models are available depending on the periphery availability and type.

Model	Cellular Network				GNSS	Internal memory	
	GPRS	3G	LTR 4G	5G		Flash 64MB	NAND 512MB
AG-207						√	√
AG-207-LT-IN	√		√		√	√	√
AG-207-LT-EU	√		√		√	√	√
AG-207-LT-GL	√	√	√		√	√	√

AG-207 is the basic variant of this model. Has a no cellular module.

The AG-207-LT-IN with LTE module. This module is to use in India.

The AG-207-LT-EU is the same as the base model except that it has a cellular module for use India and Europe.


The AG-207-LT-GL is a version with a module certified all over the world.

## Hardware informations


The Gateway is made on one PCB, which is fitted to the aluminum housing. The housing is made of a thick, strong aluminum profile with two end plates also made from aluminum. The surface of the housing is finished by anodizing.

At the bottom of the housing there are slots through which DIN rail clamp or any other clamp can be mounted by t-nuts.

## Top view dimensions

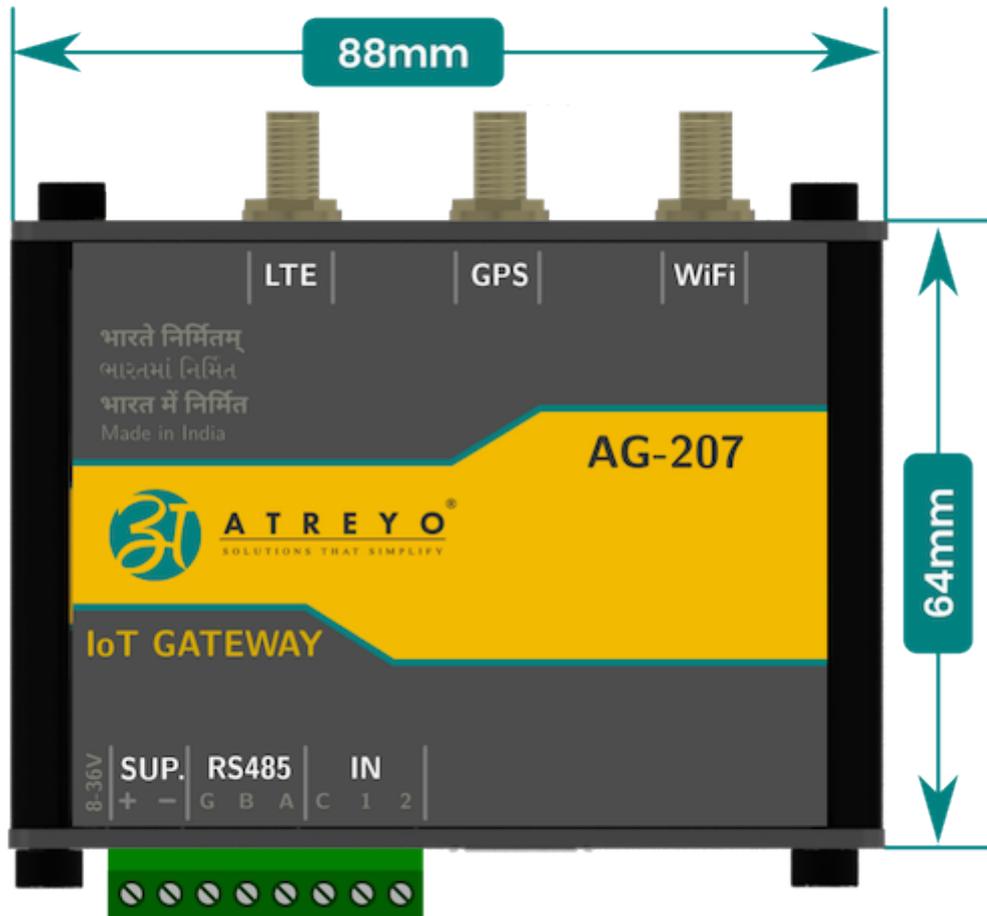



## Side view dimensions

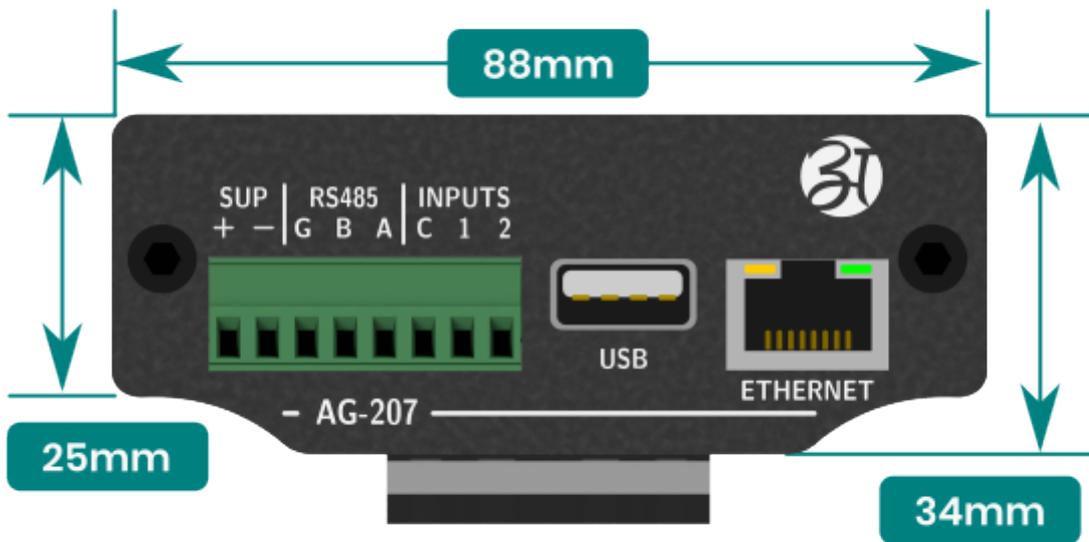

## Connectors


Top view connectors and indicators

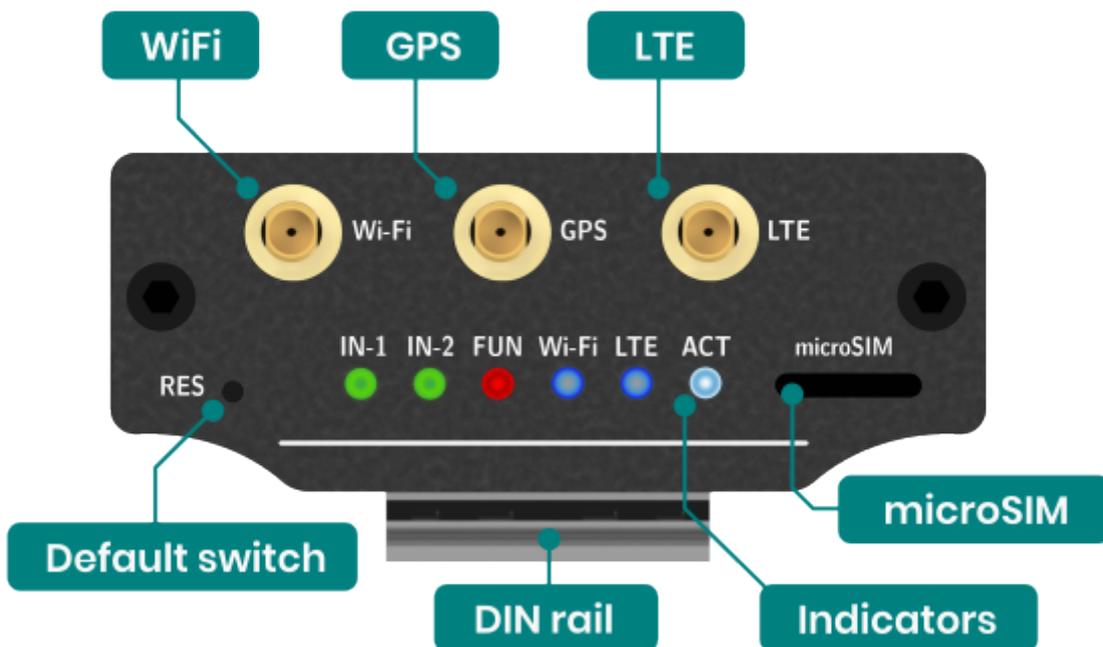

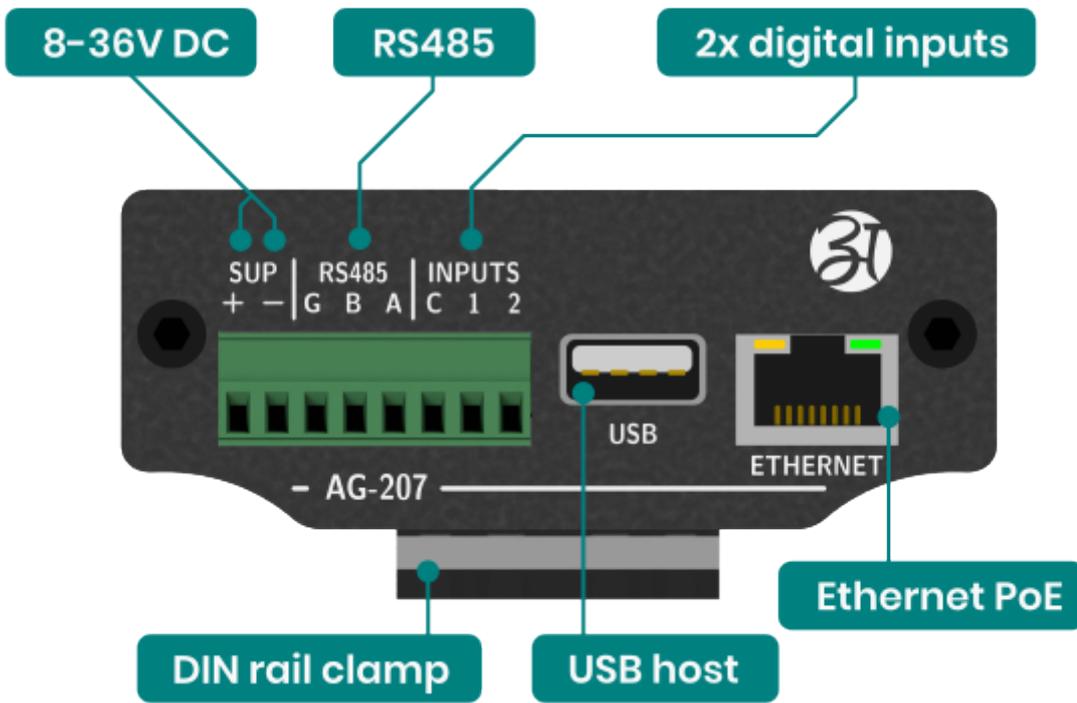


## Block diagram

For a better understanding of the operation of the gateway, refer to the block diagram. Non-essential components have been omitted. Developers who program peripherals such as GPIOs, serial etc. will find information about them in the sections dedicated to such peripherals.

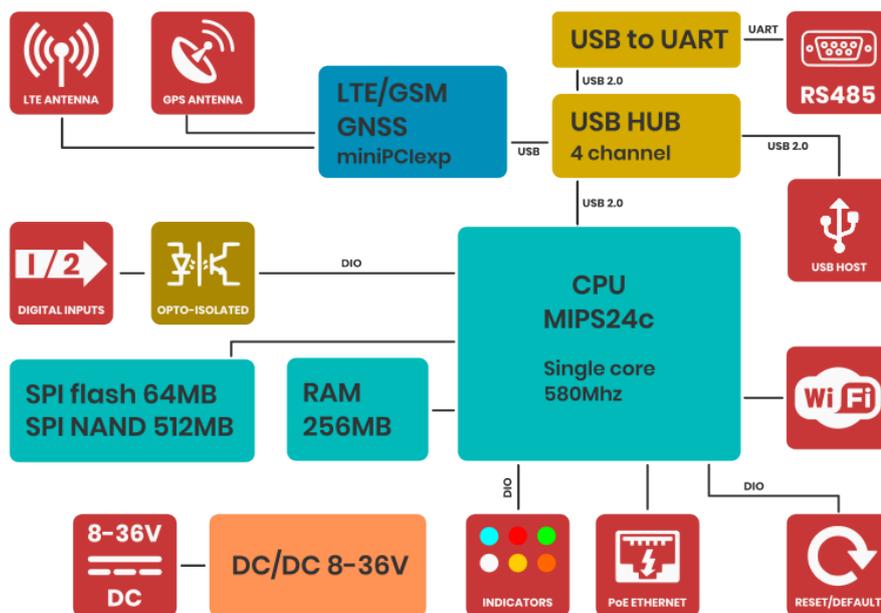

# Power supply

The Gateway power supply range is 8-36V DC. First, connect the power supply according to the diagram. The Gateway is protected against reverse power connection. If the polarity is reversed, the Gateway will not start.

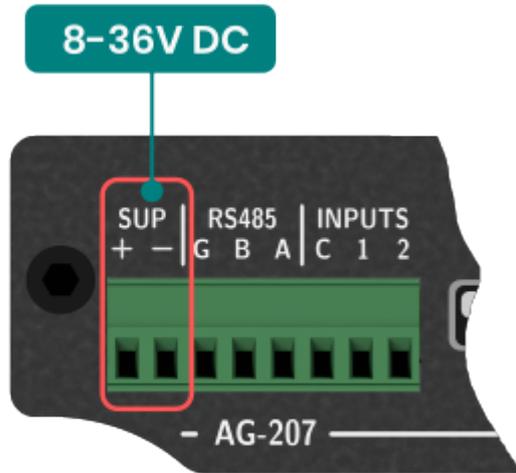

---

## PoE

The Gateway can also be powered via PoE in the range of input power supply using unused pairs of wires in the LAN cable. Below is the pinout of the RJ45 socket.

Pin number	Function	Comment
1	RX+	Data
2	RX-	Data
3	TX+	Data
4	DC+	Power supply positive
5	DC+	Power supply positive
6	TX-	Data
7	DC-	Power supply negative
8	DC-	Power supply negative

---


# LTE 4G modem

Generally, the Gateway supports all versions of Quectel MiniPCI express modems. However, you can use a third-party modem, as long as the signal outputs are compatible with those of the Quectel company. For use your LTE module, select model without LTE module installed. You also need to pay attention to the power supply to the LTE module should be 3.3V.

Mobile network signal strength is also displayed on 4 LED indicators.

## MiniPCI express pinout

Below is the description of the PCI express pinout used in the AG-702. Before installing anything other than the EC200U or EG25, be sure to check the pinout for compatibility. The LTE model is connected via a USB data bus.

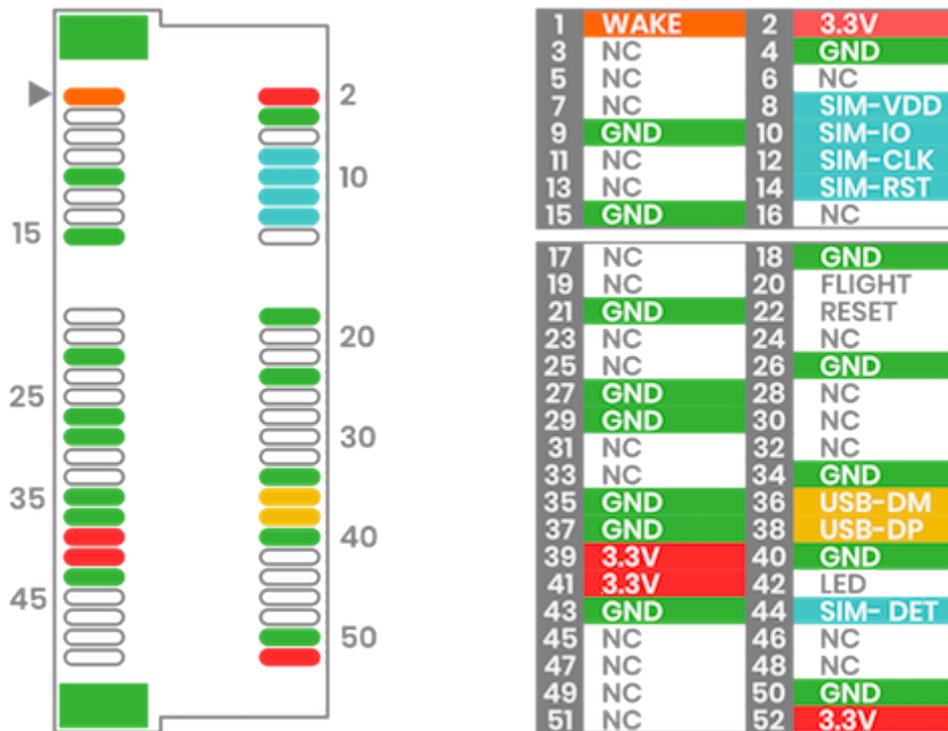

## GNSS

Device has wboarded LTE modem along with GNSS function. In order to receive the GNSS signal, an antenna is required. There are two types of GNSS antennas: active gnss antenna and passive gnss antenna. The AG-702 supports both types of antennas, but in order for the active antenna to work properly, it is necessary to start powering the active antenna. To do this, you need to go to **System > Custom Commands** and select the command **Turn GPS antenna to active mode**.

- Dashboard
- Status
- System**
- System
- Administration
- ACL Settings
- Software
- Startup
- Scheduled Tasks
- Mount Points
- LED Configuration
- Backup / Flash Firmware
- Custom Commands
- Reboot
- Modem
- Services
- Network
- VPN
- Statistics
- Logout

Dashboard | Configure

### Custom Commands

<b>Start modem</b> RUN SCRIPT COMMAND	<b>Shutdown modem</b> RUN SCRIPT COMMAND	<b>Format NAND and create as EXTROOT</b> RUN SCRIPT COMMAND
<b>Delete EXTROOT from NAND</b> RUN SCRIPT COMMAND	<b>Format NAND and mount as /nand in r...</b> RUN SCRIPT COMMAND	<b>Restore NAND as EXTROOT</b> RUN SCRIPT COMMAND
<b>Show mounted block devices</b> RUN SCRIPT COMMAND	<b>Show space on mounted devices</b> RUN SCRIPT COMMAND	<b>Test all LEDs</b> RUN SCRIPT COMMAND
<b>List devices USB</b> RUN SCRIPT COMMAND	<b>Turn GPS antenna to active mode</b> RUN SCRIPT COMMAND	<b>Turn GPS antenna to passive mode</b> RUN SCRIPT COMMAND
<b>Activate GPS on ttyUSB7</b> RUN SCRIPT COMMAND	<b>Show GPS location</b> RUN SCRIPT COMMAND	

Powered by LuCI Master (git-23.175.80454-4d5440a) / ArmonTheme v2.2.9.4 / Atrayo-OpenWrt 1.01.221019 unknown

Also on this page, you can test whether the GNSS is working properly. To do so, you need to click **Activate GPS on ttyUSB7** and then **Show GPS location**.

## Ethernet

The gateway has one RJ45 ethernet ports with LED indicators. The speed of each is 100Mbps. Ethernet, IP and other settings are set on the **Network > Interfaces** page.

The default IP of ethernet is:  
**192.168.1.60**

- Dashboard
- Status
- System
- Modem
- Services
- Network**
- Interfaces
- Wireless
- Switch
- Routing
- DHCP and DNS
- Diagnostics
- Firewall
- Tcpdump
- VPN
- Statistics
- Logout

Interfaces | Devices | Global network options

REFRESHING

### Interfaces

<b>lan</b> br-lan	Protocol: Static address Uptime: 1h 55m 31s MAC: 32:54:52:70:B4:EC RX: 0 B (0 Pkts.) TX: 342 B (1 Pkts.) IPv4: 192.168.1.1/24 IPv6: undefined/0	RESTART STOP EDIT DELETE
<b>lte</b> 3g-lte	Protocol: UMTS/GPRS/EV-DO RX: 0 B (0 Pkts.) TX: 0 B (0 Pkts.) Error: Network device is not present	RESTART STOP EDIT DELETE
<b>wan6</b> eth0.2	Protocol: Static address Uptime: 1h 51m 59s MAC: 32:54:52:70:B4:EC RX: 3.92 MB (27520 Pkts.) TX: 2.41 MB (3715 Pkts.) IPv4: 192.168.10.87/24 IPv6: undefined/0	RESTART STOP EDIT DELETE

ADD NEW INTERFACE...

SAVE & APPLY SAVE RESET

Powered by LuCI Master (git-23.175.80454-4d5440a) / ArmonTheme v2.2.9.4 / Atrayo-OpenWrt 1.01.221019 unknown

## WiFi

The gateway has WiFi 2.4Ghz. By default, the WiFi is set as a hotspot and shares internet from Ethernet and from LTE via WiFi.

---

## Serial Interface

The Gateway has one RS485.

### RS485

The baudrate range for RS485 port (/dev/ttyUSB0) is 600 bps to 460800 bps. Note that with a longer cable, the maximum speed may drop. It is recommended to use special cables designed for RS485. The port is protected by high-power TVS diodes against electrical surges.

---

## Digital Inputs

The Gateway has two digital inputs and one digital output.

### Digital inputs

The digital inputs are completely independent optically isolated inputs that accept an input signal level of up to 30V DC. They have no common minus. They can be connected either with a common plus or minus. Can be controlled with open collector. They require to be powered. The range of the signal considered as a logical 1 is from 3.5V to the maximum input voltage.

# Configuration Manual

Please read carefully before starting. Also read the product [safety information](#).  
This guide is updated regularly.

---


## First start

After unpacking, the gateway is ready to use, but requires configuration to adapt to the required functions.

---

## Power supply

First, connect the power supply according to the [power supply](#) information and to the diagram.

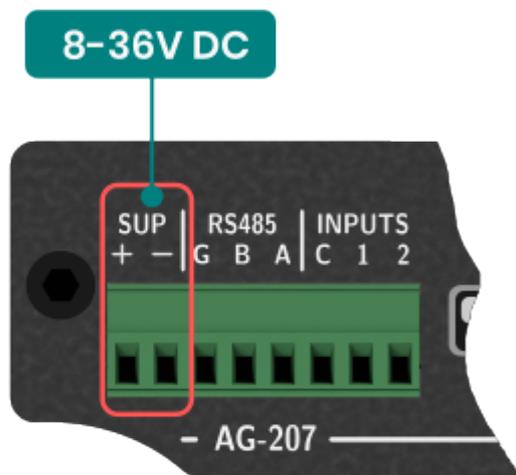

---

## Opening inbuilt website

Through the WAN interface

To access the built-in website, connect the gateway by WAN to the local network and enter IP address in the address window of the browser. Please note that it may take some time from powering on to booting up the system. When the LEDs next to the RJ45 socket start flashing, after about 10 seconds the built-in website becomes available.

IP: **192.168.10.60**

user name: **root**

password: **root**

## Through the WiFi interface

By default, the gateway creates its own network with default ESSID "AG-207". The network is secured with default password "atreyo12". Connect to this network and enter the IP in the address bar of your browser.

IP: **192.168.1.1**

user name: **root**

password: **root**



After logging in, you are automatically taken to the dashboard page.

- Dashboard
- Status
- Overview
- Routing
- Firewall
- System Log
- Processes
- Channel Analysis
- Realtime Graphs
- System
- Modem
- Services
- Network
- VPN
- Statistics
- Logout

REFRESHING

### Status

**Internet**

Connected

**System**

Hostname	AG-207
Model	Atreyo AG-207
Architecture	MediaTek MT7628AN ver:1 eco:2
Target Platform	ramips/mt76x8
Firmware Version	Atreyo-OpenWrt 1.01 221019 / LuCI unknown version
Kernel Version	5.15.71
Local Time	2023-12-20 05:33:00
Uptime	0h 16m 34s
Load Average	0.25, 0.15, 0.23

**Unique**

Serial number	0920-8754-5270-B4EC
---------------	---------------------

## Password setting

To secure the gateway, change the default password. Set a password go to the **system>administration** page. To maintain security, it is recommended to use long and complex passwords.

- Dashboard
- Status
- System
- System
- Administration
- ACL Settings
- Software
- Startup
- Scheduled Tasks
- Mount Points
- LED Configuration
- Backup / Flash Firmware
- Custom Commands
- Reboot
- Modem
- Services
- Network
- VPN
- Statistics
- Logout

Router Password SSH Access SSH-Keys HTTP(S) Access

### Router Password

Changes the administrator password for accessing the device

Password

Confirmation

SAVE

Powered by LuCI Master (git-23.175.80454-1d5440a) / ArgonTheme v2.2.9.4 / Atreyo-OpenWrt 1.01 221019 unknown

To maintain security, it is recommended to use long and complex passwords.

# Cellular modem


## Modem

The Gateway in its basic configuration is equipped with an LTE modem that also supports GPRS and SMS functions. Different modems were used depending on the model variant. Here is a table of models.

---

## SIM card

The Gateway supports one microSIM card, both 1.8V and 3V. The card connector is a push-pull type. When installing the SIM card, pay attention to the correct insertion of the card.

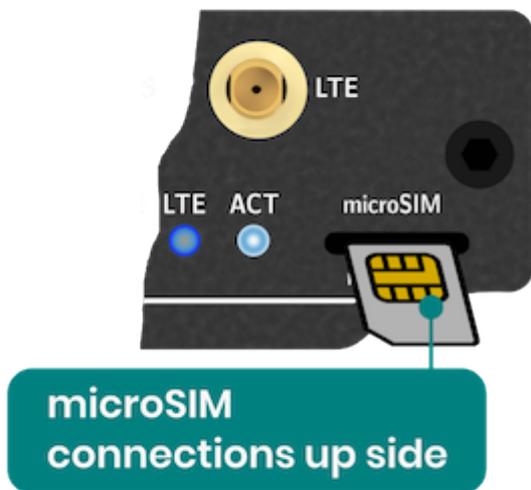

The card can be inserted the other way around and you can have the impression that you have inserted it correctly. So take a close look at the above drawing.

---

## Using Cellular Network

To activate the LTE modem, go to **Network > Interfaces** and select the lte tab there.

- Dashboard
- Status
- System
- Modem
- Services
- Network**
  - Interfaces
  - Wireless
  - Switch
  - Routing
  - DHCP and DNS
  - Diagnostics
  - Firewall
  - Tcpdump
  - VPN
  - Statistics
  - Logout

REFRESHING

Interfaces
Devices
Global network options

### Interfaces

<div style="background-color: #90EE90; padding: 5px; border: 1px solid #008080; display: inline-block;">lan</div>  br-lan	Protocol: Static address Uptime: 1h 55m 31s MAC: 32:54:52:70:B4:EC RX: 0 B (0 Pkts.) TX: 342 B (1 Pkts.) IPv4: 192.168.1.1/24 IPv6: undefined/0	<div style="display: flex; gap: 5px;"> <span style="background-color: #008080; color: white; padding: 2px 5px; border-radius: 3px;">RESTART</span> <span style="background-color: #808080; color: white; padding: 2px 5px; border-radius: 3px;">STOP</span> <span style="background-color: #008080; color: white; padding: 2px 5px; border-radius: 3px;">EDIT</span> <span style="background-color: #FF0000; color: white; padding: 2px 5px; border-radius: 3px;">DELETE</span> </div>
<div style="background-color: #9370DB; padding: 5px; border: 1px solid #008080; display: inline-block;">lte</div>  3g-lte	Protocol: UMTS/GPRS/EV-DO RX: 0 B (0 Pkts.) TX: 0 B (0 Pkts.) <b>Error: Network device is not present</b>	<div style="display: flex; gap: 5px;"> <span style="background-color: #808080; color: white; padding: 2px 5px; border-radius: 3px;">RESTART</span> <span style="background-color: #808080; color: white; padding: 2px 5px; border-radius: 3px;">STOP</span> <span style="background-color: #008080; color: white; padding: 2px 5px; border: 2px solid red; border-radius: 3px;">EDIT</span> <span style="background-color: #FF0000; color: white; padding: 2px 5px; border-radius: 3px;">DELETE</span> </div>
<div style="background-color: #FF6347; padding: 5px; border: 1px solid #008080; display: inline-block;">wan6</div>  eth0.2	Protocol: Static address Uptime: 1h 51m 59s MAC: 32:54:52:70:B4:EC RX: 3.92 MB (27520 Pkts.) TX: 2.41 MB (3715 Pkts.) IPv4: 192.168.10.87/24 IPv6: undefined/0	<div style="display: flex; gap: 5px;"> <span style="background-color: #808080; color: white; padding: 2px 5px; border-radius: 3px;">RESTART</span> <span style="background-color: #808080; color: white; padding: 2px 5px; border-radius: 3px;">STOP</span> <span style="background-color: #008080; color: white; padding: 2px 5px; border-radius: 3px;">EDIT</span> <span style="background-color: #FF0000; color: white; padding: 2px 5px; border-radius: 3px;">DELETE</span> </div>

ADD NEW INTERFACE...

SAVE & APPLY
SAVE
RESET

Powered by LuCI Master (git-23.175.80454-1d5440a) / ArgonTheme v2.2.9.4 / Atreyo-OpenWrt 1.01 221019 unknown

Mostly the network operator requires you to enter the APN, sometimes it also requires a username and password. Enter the required data and save.

REFRESHING

Interfaces - lte

General Settings
Advanced Settings
Firewall Settings
DHCP Server

Status

Protocol

Bring up on boot

Modem device

Service Type

**Device: 3g-lte**  
 RX: 0 B (0 Pkts.)  
 TX: 0 B (0 Pkts.)  
**Error: Network device is not present**

UMTS/GPRS/EV-DO

/dev/ttyUSB1

LTE

APN


PIN

PAP/CHAP username

PAP/CHAP password

Dial number

Then go to **System > Custom Commands** and click on **Start modem**.

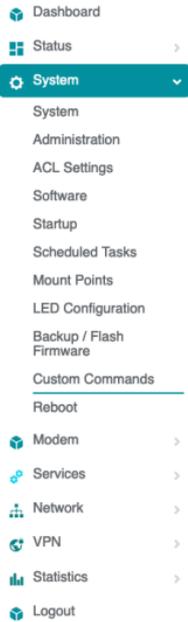

Dashboard
Configure
Command successful (Code: 0)

### Custom Commands

<b>Start modem</b> <span style="background-color: #007bff; color: white; padding: 2px 5px; border: 1px solid red;">RUN SCRIPT COMMAND</span>	<b>Shutdown modem</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Format NAND and create as EXTROOT</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>
<b>Delete EXTROOT from NAND</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Format NAND and mount as /nand in r...</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Restore NAND as EXTROOT</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>
<b>Show mounted block devices</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Show space on mounted devices</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Test all LEDs</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>
<b>List devices USB</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Turn GPS antenna to active mode</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Turn GPS antenna to passive mode</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>
<b>Activate GPS on ttyUSB7</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	<b>Show GPS location</b> <span style="background-color: #007bff; color: white; padding: 2px 5px;">RUN SCRIPT COMMAND</span>	

The modem will start up and connect to the Internet. To check if it is working properly and what the signal is, go to **Modem > Information about 3G/4G/5G connection**.



Details
USB debug information
Configuration
REFRESHING


### 3ginfo-lite

More information about the 3ginfo on the [eko.one.pl](http://eko.one.pl) forum.

<b>General Information</b>	
Signal strength	93%
Operator	JIO 4G
SIM status	Registered
Connection statistics	🔄 0d, 00:00:43   ▼ 1.7 KiB ▲ 2.8 KiB
Technology	LTE
<b>Modem Information</b>	
Modem type	-
Revision / Firmware	-
IP address / Communication Port	/dev/ttyUSB6
Protocol	-

## Cellular modem ON on start

To make the gateway automatically connect to the Internet after startup, you need to add a modem startup in the **System > Startup section** under **Local Startup**, add a line before line **'exit 0'**. `/usr/commands/start_modem.sh`. Then save the changes. After each reboot, the gateway will automatically start the modem.

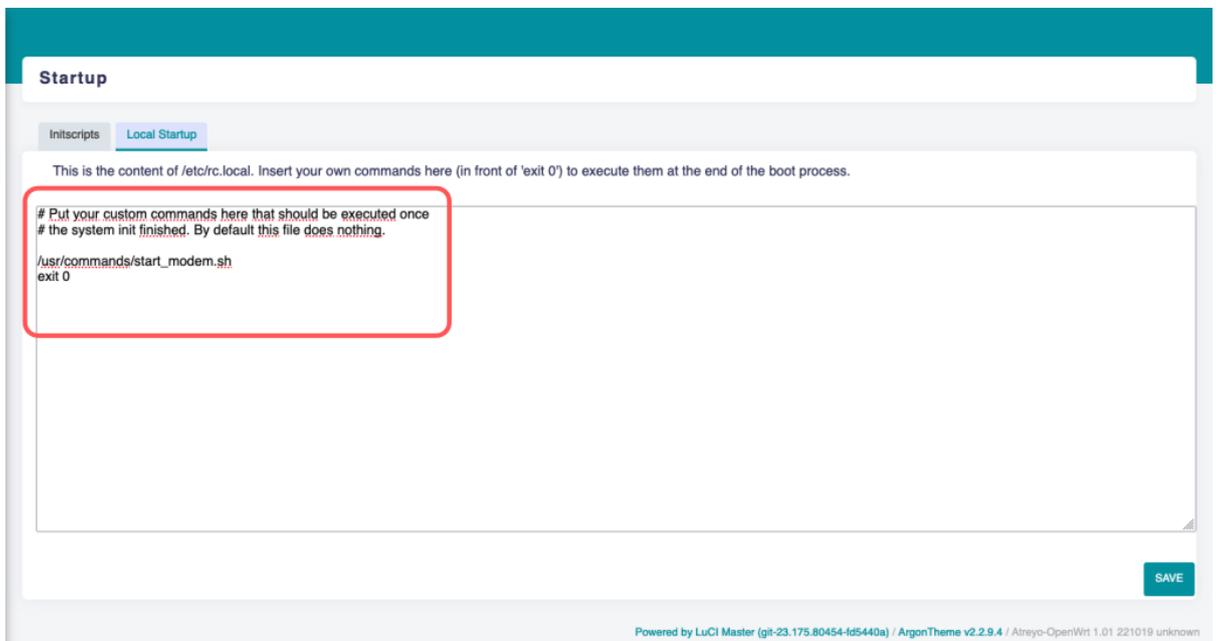

## SMS

To test the SMS operation, the gateway has an SMS interface installed. Under **Modem > SMS Messages**. There you can check sent and received SMS. Be sure to enter the phone number together with the country prefix, but without the + sign. The maximum number of characters is 160. The system does not support alphabets such as devanagari. The maximum number of messages in the inbox is 20.

For send SMS go to **Send Message** tab.

## System statistics

The gateway has a built-in real-time statistics system under Status > Realtime Graphs and accurate statistics with selectable time range under Statistics > Graph. You can check CPU load, memory usage, network load, etc.

## Realtime Load

## Statistics Interfaces

## Statistics Memory

## Statistics Processor

## Statistics System Load

---

## Modbus


The Gateway has a very advanced Modbus application with a convenient graphical interface. Below are the capabilities of the application:

- Modbus TCP/IP and Modbus RTU support.
  - Any number of serial ports
  - Support for external USB/serial interfaces
  - JSON, TCP/IP and MQTT string formation
  - Data logging in the event of no connection to a server
  - Storage of all data in internal memory
- 

## Using the terminal

The AG-702 has a built-in bash terminal. With it you can execute all commands in the OpenWRT system. To enter the terminal, go to the **tools > terminal** section on the built-in website. The default password is the same **root/root**.

- Dashboard
- Status >
- System >
- Modem >
- Services** ▾
  - Modbus Device
  - Modbusbridge
  - Internet Detector
  - Apinger
  - ser2net
  - Terminal
  - uHTTPd
- Network >
- VPN >
- Statistics >
- Logout

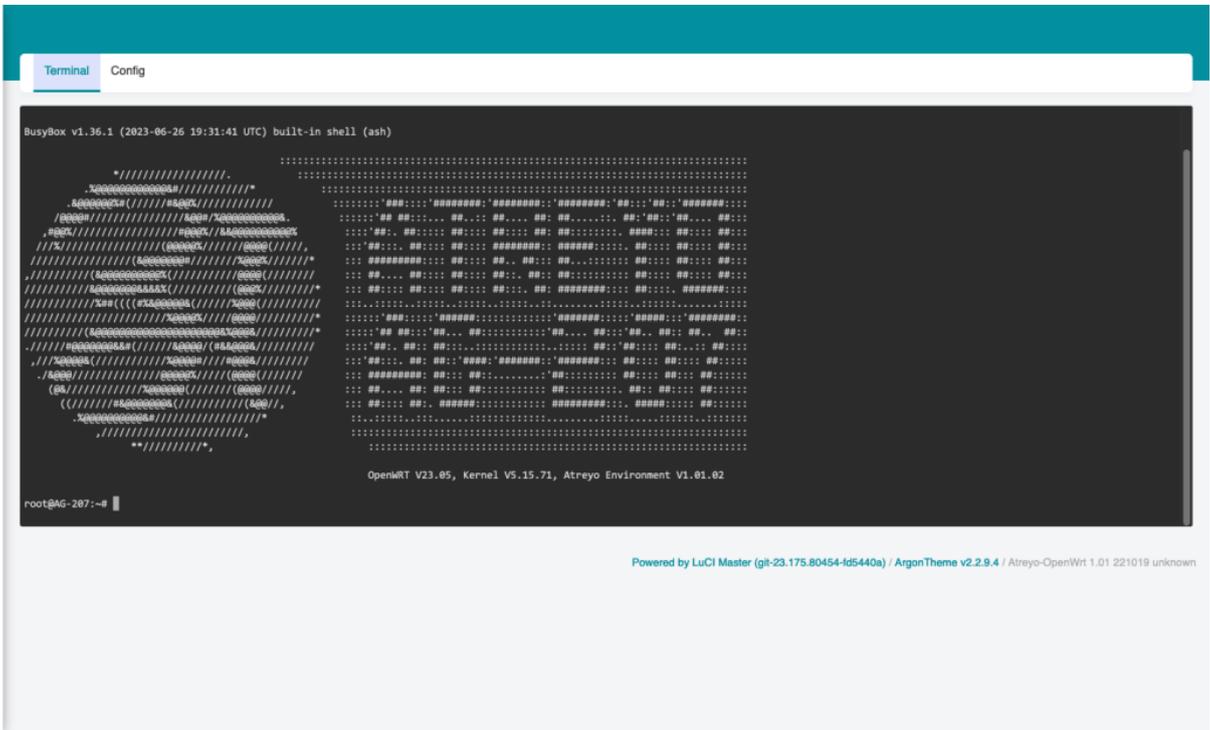

## Reset and default

### Make factory default

To reset the system to factory settings, hold down the "Default/Reset" button for more than 5 seconds while the device is operational. During the factory reset, all LED indicators will light up for 2 seconds.

### Reset device

To restart the gateway without disconnecting the power supply, press and hold the "Reset/Default" button for less than 5 seconds. During the restart, 4 LED indicators will light up for 1 second (IN-1, IN-2, RS485, RS232)


Do not hold the button for more than 5 seconds, as it will trigger the gateway to restore default settings.

## Storage overlay

### How to make a storage overlay

AG-207 has a 512MB NAND memory in addition to the 64MB FLASH memory. It is possible in a very simple way to increase the memory by extending the system partition to the so-called overlay.

To do this, go to the **System > Custom Commands** section and select **Format NAND and create as EXTROOT** and **create as EXTROOT**. Then wait a while for the operation to complete when on bottom of page "Waiting for command to complete..." will close. The formatting process takes a few minutes.

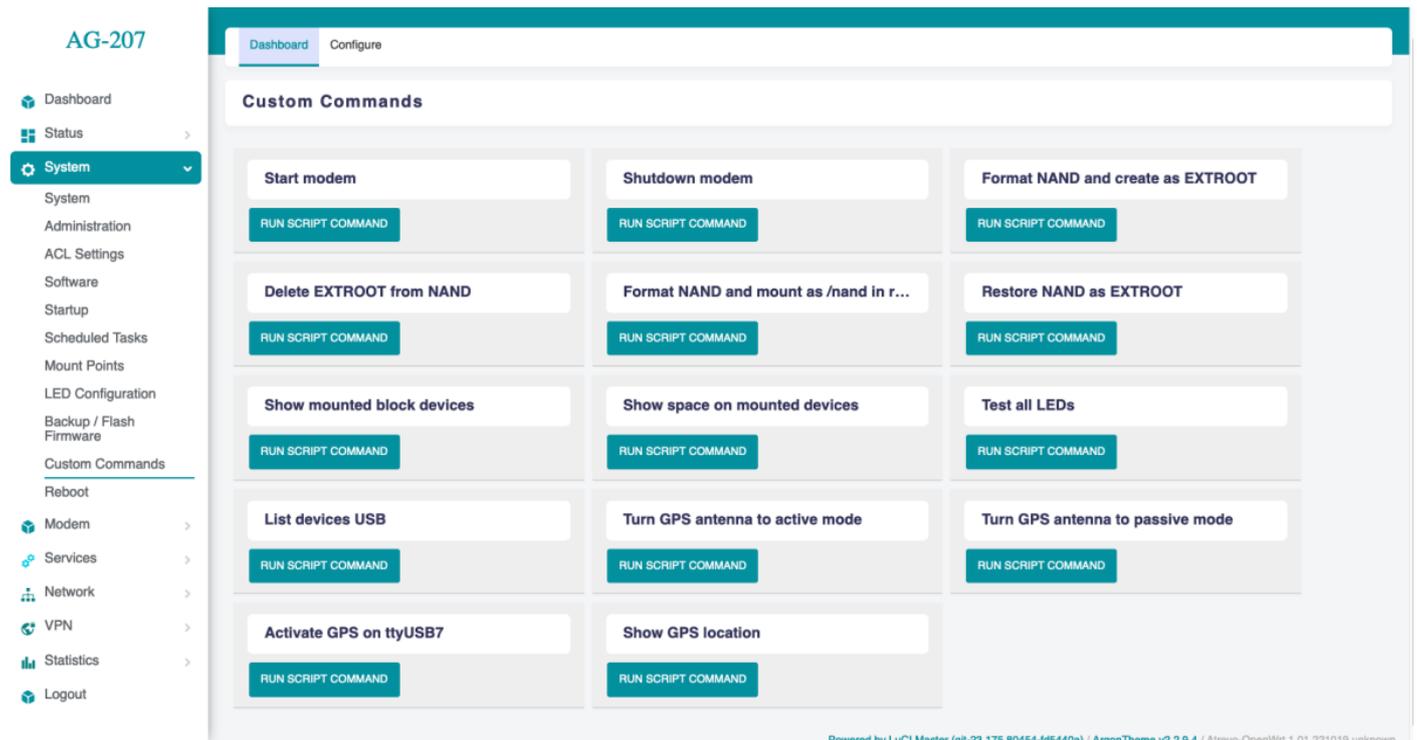

Then, to verify, go to **System > Mounting Points** and see if we have the overlay done correctly.

**Mounted file systems**

Filesystem	Mount Point	Available	Used	Unmount
/dev/root	/rom	0 B / 17.25 MiB	100.00% (17.25 MiB)	-
tmpfs	/tmp	120.55 MiB / 121.15 MiB	0.49% (612.00 KiB)	-
/dev/ubi0_0	/overlay	441.98 MiB / 447.03 MiB	0.07% (336.00 KiB)	-
overlayfs:overlay	/	441.98 MiB / 447.03 MiB	0.07% (336.00 KiB)	-
tmpfs	/dev	512.00 KiB / 512.00 KiB	0.00% (0 B)	-

**Mount Points**

Mount Points define at which point a memory device will be attached to the filesystem


Enabled	Device	Mount point	Filesystem	Mount options	Run filesystem check	
<input checked="" type="checkbox"/>	/dev/ubi0_0	/overlay	ubifs	rw,sync	No	<input type="checkbox"/> <input type="button" value="EDIT"/> <input type="button" value="DELETE"/>

You can also restore partitions to their previous state and format the NAND as data memory. For this isn custom command section click on **Delete EXTROOT from NAND** and after that **Format NAND and mount as /nand in root file**.




# Applications

The gateway has the ability to install many ready-made applications. For this purpose, the gateway must be connected to the Internet. You need to go to **System > Software**. First click **Update Lists...**

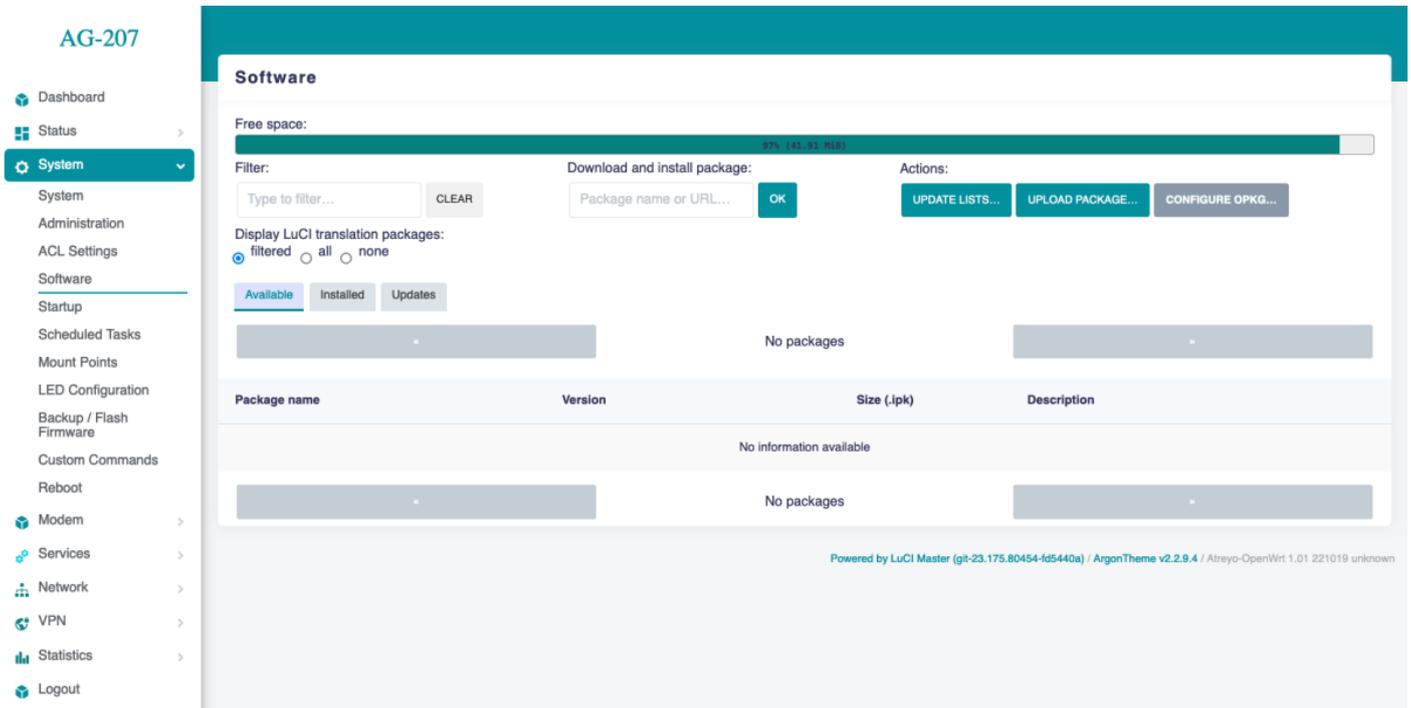

After waiting a while, the "Executing package manager" window will appear. You should click on **Dismiss**.

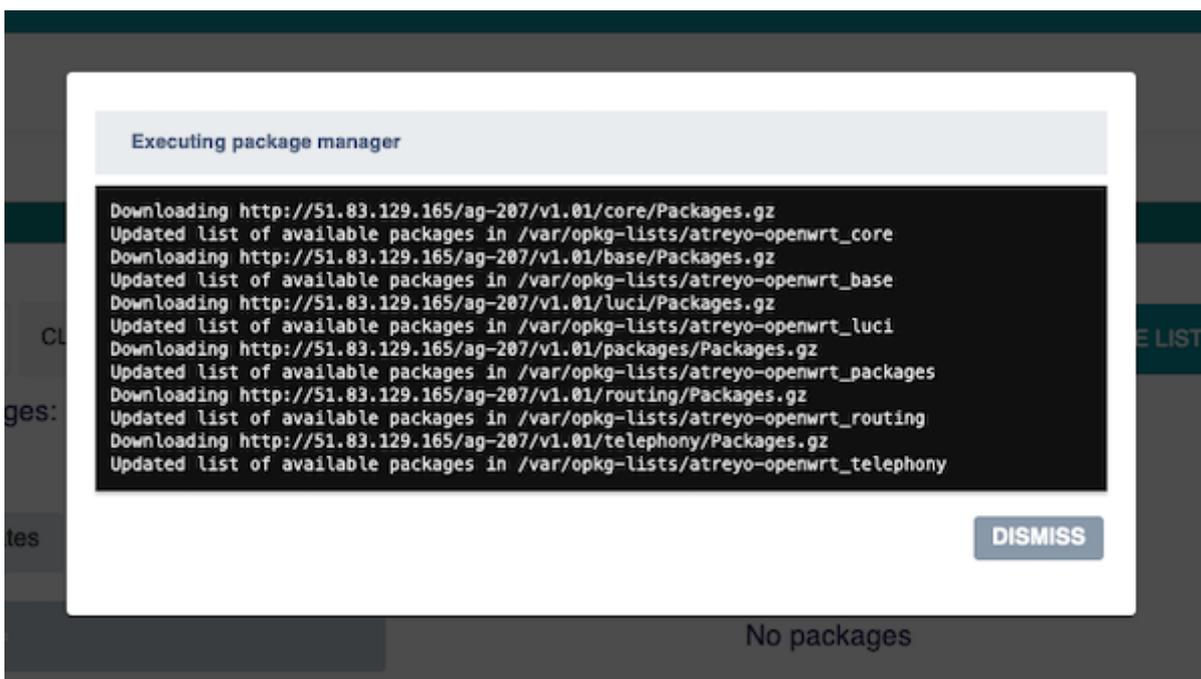

Then you can search for the application you are interested in by typing its name in the "Filter" window.

## Application Installation

To install the application, click on install on the right side. Then if a "pop-up" appears then click **dismiss**.

Most of the time, applications are located in the Service tab after installation, although this is not the rule. After installation, you have to log out and login back in for the application to appear in the interface.

## Local file installation

Also, you can install applications from a file on your computer. To do this, you need to click **upload package**.

---

# Safety information

## Operating environment

- The device is designed to be installed in clean, dust-free and insect-free places
- Operating temperature: -25 ~ 65°C (-13 ~ 149°F).
- Humidity range is 10% to 95% (non-condensing). Use the device in a dry environment.
- Away from heat sources and direct sunlight.
- It must not be exposed to acid fumes, salts and other chemicals.
- The device must not be used in places where there is a risk of gas explosion.

Use in inappropriate conditions may damage the device or shorten its life.

## Electrical and power supply safety

- The device is powered with a voltage in the range of 8-36V. Voltage up to 24V is considered safe. Be especially careful when supplying them with higher voltages.
- Use only approved accessories
- Use the supplied power adapter or a good quality certified power adapter with the correct supply voltage range and sufficient power.
- Only use approved accessories like antenna etc.

Only a person with qualification and appropriate knowledge should install the device.

## Malfunctioning and damaged device

- Do not disassemble the device.
- Only qualified personnel must service or repair the device or its accessories.
- If water or other liquid has got into the device, or if it looks mechanically damaged, do not connect the device, but take it to an authorized service center.

## Radio frequency exposure

This device has been designed and manufactured not to exceed radio frequency energy emission limits set by regulatory agencies. To comply with RF exposure guidelines, the device must be used at least 20 cm away from a person's body. Failure to follow these instructions may result in exceeding the applicable RF exposure limits. This only applies to models with a built-in LTE modem.

## What to do and what not to do

- You are solely responsible for the use of the device and any consequences of its use.
- Do not store or use the device in harsh environments such as dust, gases, oils, chemical vapors and damp places.
- Do not throw the device and its accessories. Handle with care.
- The device heats up during operation. Ensure proper ventilation.
- If you need to dispose of your device, check your local regulations for recycling and disposal of electronics.
- Route power, Ethernet, and antenna cables properly so that they cannot be accidentally pulled out.
- The device should be used and kept away from small children.