

Cellular Configuration Manual

1. Cellular modem

1.1 Modem

The Gateway in its basic configuration is equipped with an LTE modem that also supports GPRS and SMS functions. Different modems were used depending on the model variant. [Here](#) is a table of models.

1.2 SIM card

The Gateway supports two nano SIM cards, both 1.8V and 3V. The card connector is tray type. When installing the SIM card, pay attention to the correct insertion of the card. The used SIM card tray is designed so that the card sticks to the tray. This make easily insert the SIM regardless of the position of the Gateway.


2 Using cellular network

The AG-702 has a built-in **SIM Switch app**. To connect to the Internet using SIM Switch, follow [this guide](#). We recommend using the SIM Switch app, but you can also start the modem manually by following the instructions below. Do not use both methods at the same time.


2.1 Manual modem configuration

To activate the LTE modem, go to **Network > Interfaces** and select the lte tab there.

Mostly the network operator requires you to enter the APN, sometimes it also requires a username and password. Enter the required data and save.

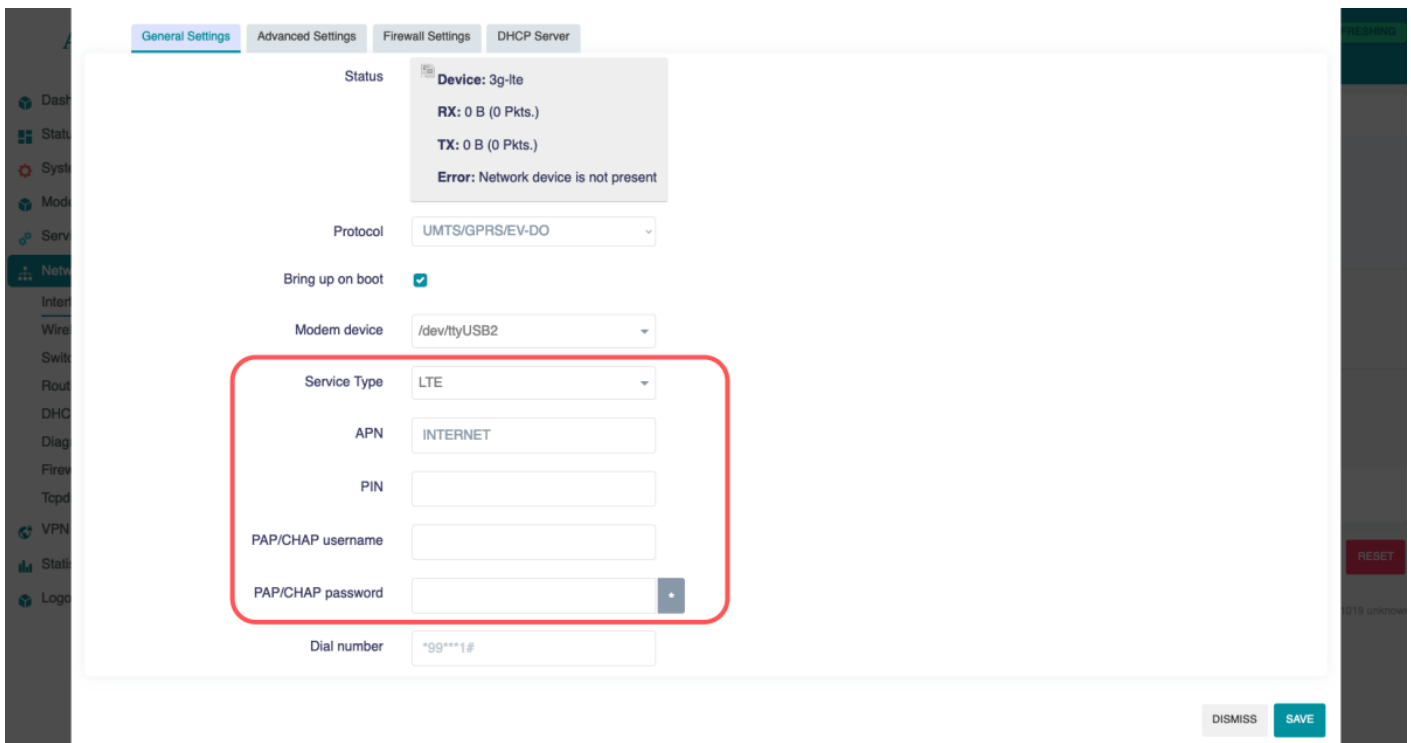

Then go to **System > Custom Commands** and click on Start modem with SIM1/Start modem with SIM2. Depending on which SIM card you want to start.

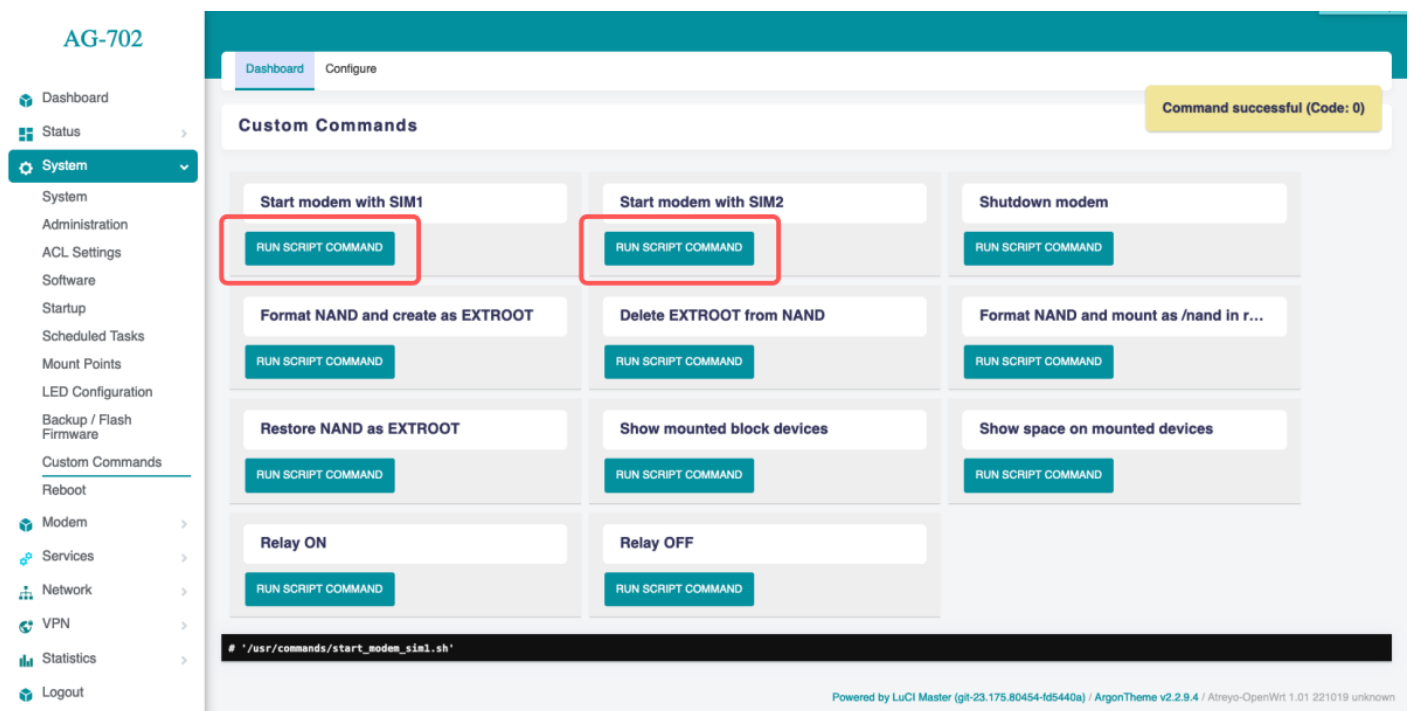

The modem will start up and connect to the Internet. To check if it is working properly and what the signal is, go to Modem > Information about 3G/4G/5G connection. When the modem starts up, the LEDs showing the signal strength will also light up. This makes it easy to see the signal strength in a particular location.

AG-702

Dashboard

Status

System

Modem

Information about 3G/4G/5G connection

SMS Messages

Services

Network

VPN

Statistics

Logout

DetailsUSB debug informationConfiguration

3ginfo-lite

More information about the 3ginfo on the [eko.one.pl forum](#).

General Information

Signal strength

100%

Operator

JIO 4G

SIM status

Registered

Connection statistics

0d, 00:00:37 | ▼ 388.0 B ▲ 1.6 KiB

Technology

LTE

Modem Information

Modem type

-

Revision / Firmware

-

IP adress / Communication Port

/dev/ttyUSB7

Protocol

-

2.2 Cellular modem ON on start

To make the gateway automatically connect to the Internet after startup, you need to add a modem startup in the System > Startup section under Local Startup, add a line before line 'exit 0'. **/usr/commands/start_modem_sim1.sh or /usr/commands/start_modem_sim2.sh**. Then save the changes. After each reboot, the gateway will automatically start the modem with the selected SIM card.

Remember, if you're using the SIM Switch app, don't set up a startup script.

2.3 SMS

To test the SMS operation, the gateway has an SMS interface installed. Under **Modem > SMS Messages**. There you can check sent and received SMS. Be sure to enter the phone number together with the country prefix, but without the + sign. The maximum number of characters is 160. The system does not support alphabets such as devanagari. The maximum number of messages in the inbox is 20.

AG-702

Dashboard

Status

System

Modem

Information about 3G/4G/5G connection

SMS Messages

Services

Network

VPN

Statistics

Logout

Received Messages

Send Messages

USSD Codes

AT Commands

Configuration

SMS Messages

Web UI for receiving messages via sms_tool. More information about the sms-tool on the [eko.one.pl](#) forum.

Received Messages

Messages store in:SIM card

Messages (Inbox / Maximum):2 / 10 (20%)

	From	Received	Message
☐	91	2023-12-22 12:07	Yes. System working ok.
☐	91	2023-12-22 12:06	Test reply

REFRESH SMS

DELETE MESSAGE(S)

For send SMS go to **Send Message** tab.

AG-702

Dashboard

Status

System

Modem

Information about 3G/4G/5G connection

SMS Messages

Services

Network

VPN

Statistics

Logout

Received Messages

Send Messages

USSD Codes

AT Commands

Configuration

SMS Messages

Web UI for sending messages via sms_tool. More information about the sms-tool on the [eko.one.pl](#) forum.

Send Messages

User Phonebook:>

Send to:91

Message text:

Testing SMS system.

141

Status:

SEND MESSAGE

Powered by LuCI Master (git-23.175.80454-4d5440a) / ArgonTheme v2.2.9.4 / Atrayo-OpenWrt 1.01 221019 unknown

Revision #5

Created 2026-10-05 11:49:50 UTC by Yogesh

Updated 2026-10-05 11:58:09 UTC by Yogesh