


# Node-RED

**NodRED** functionality is pre-installed and it has been hosted on **1880 port**.

To access NodeRED use icon in **Application** section or open browser and hit "**<gateway\_IP>:1880**"


New tab will open and and it might pop-up for user/pass if you are using it either first time or after long.

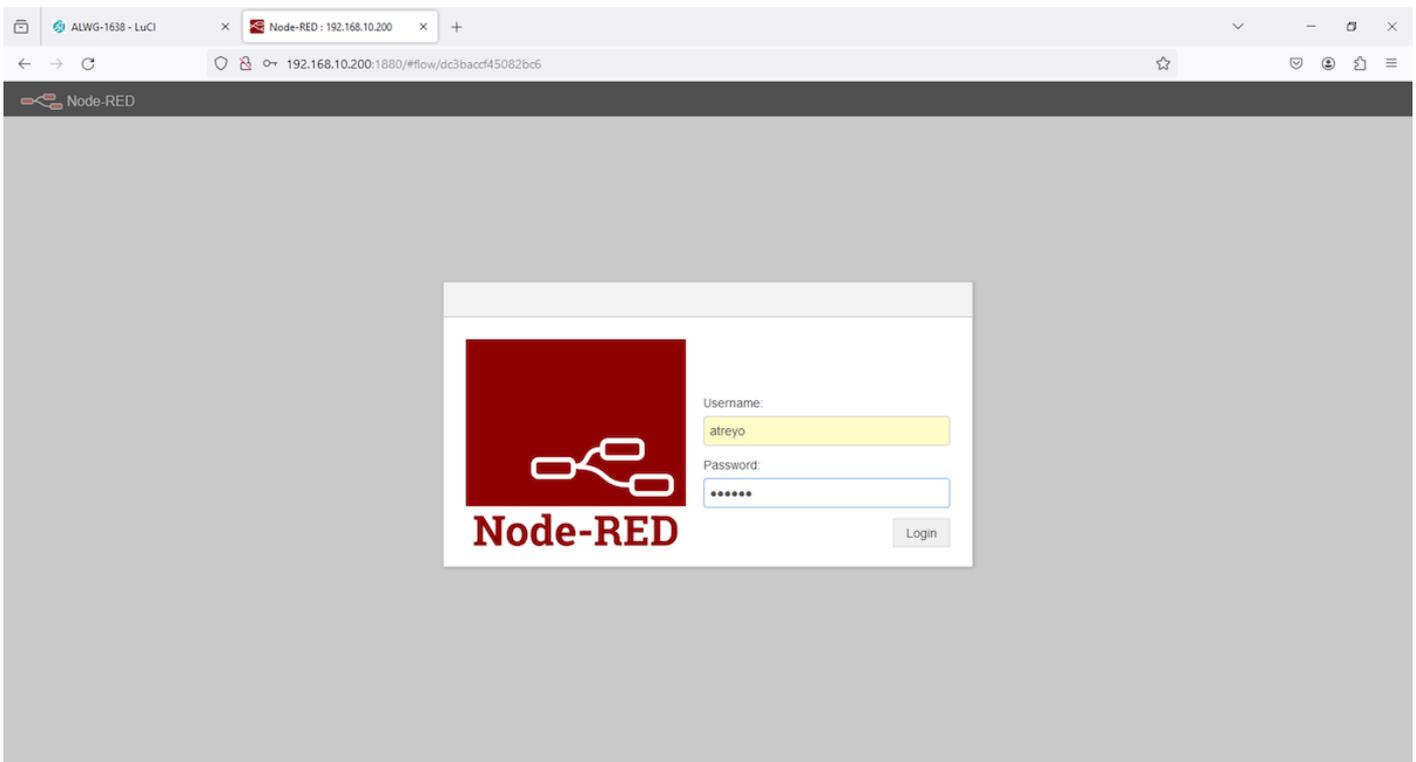


Credentials : user/pass --> **atreyo/atreyo**

After logging in either you will have a blank flow or any example flow saved by the atreyo testing team.

1.

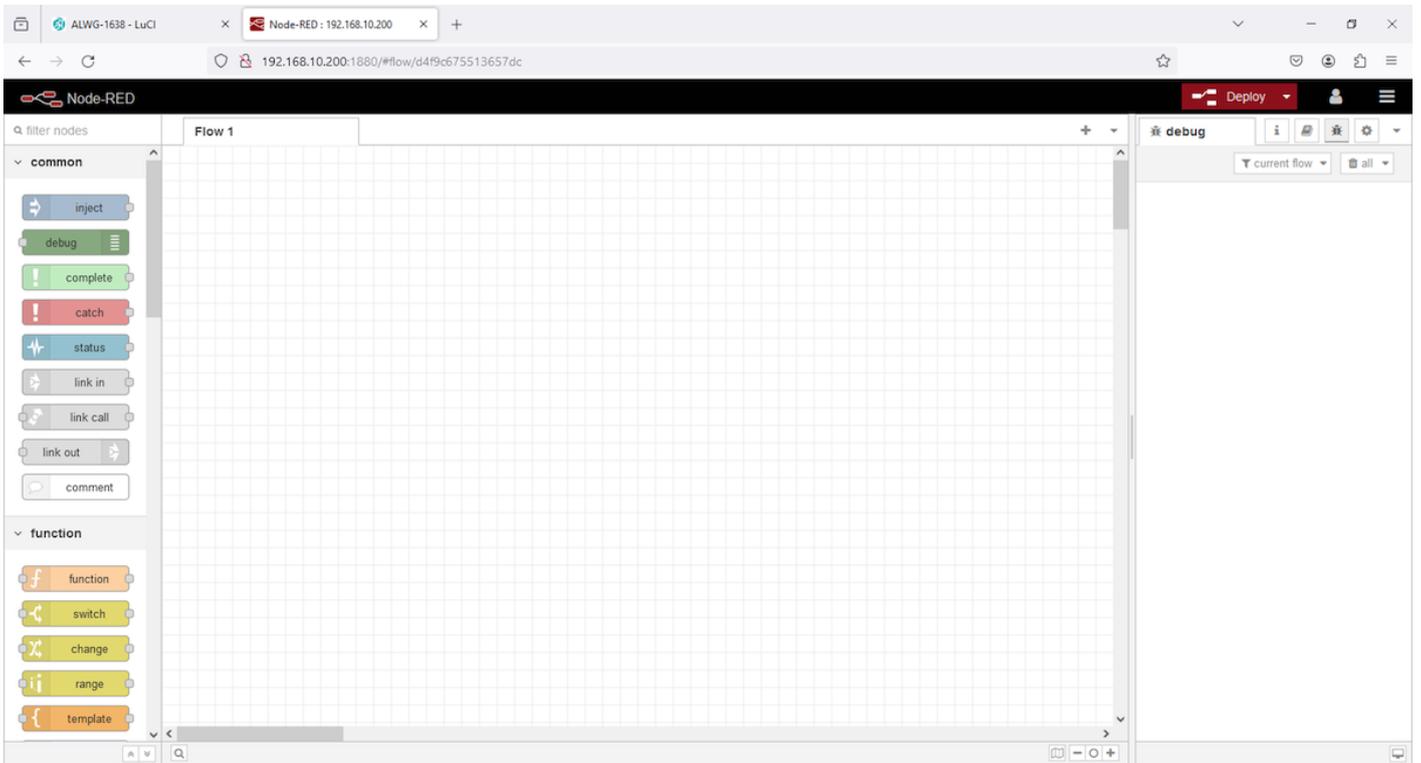

2.

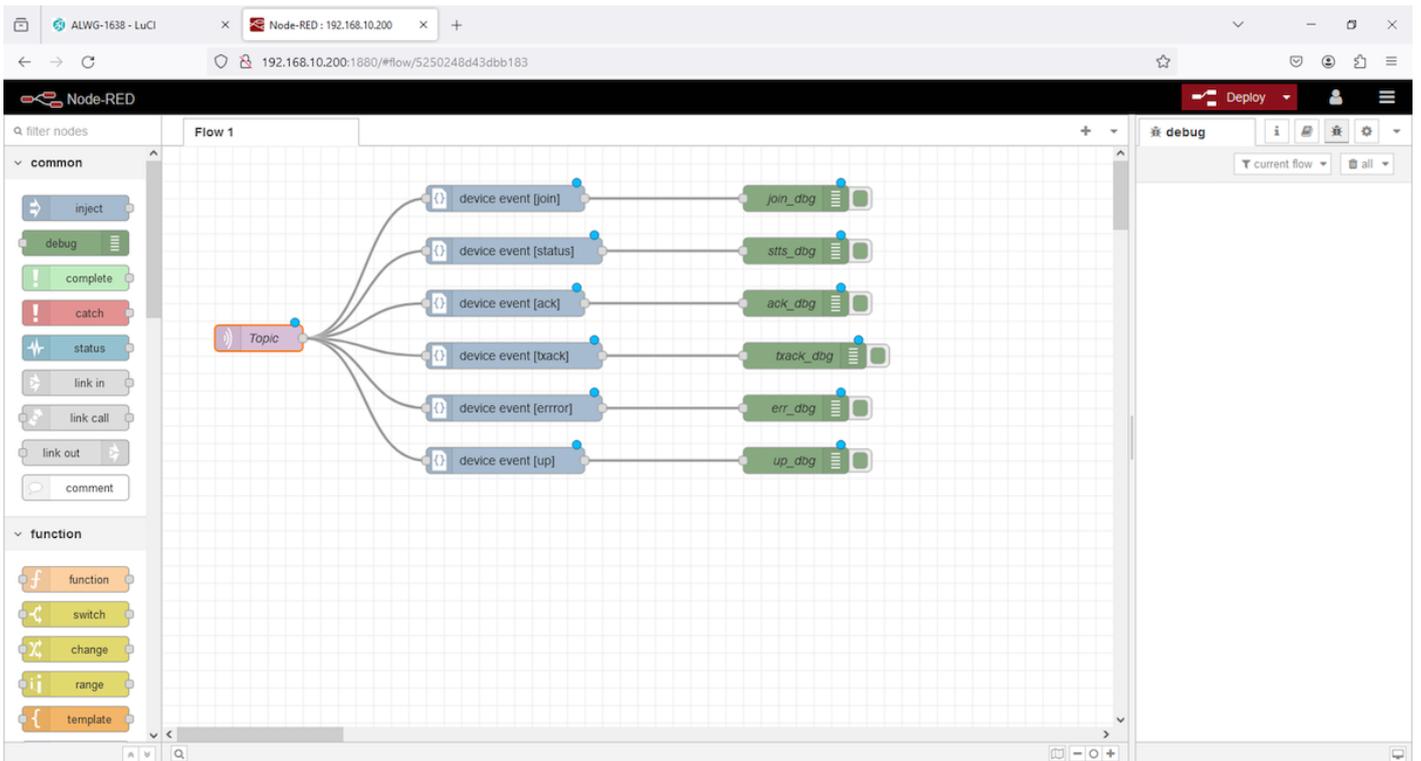

Above example flow is designed to fetch events of end devices, this flow will provide join, status, uplink, etc, events in debug.

To retrieve data from events one should write function in NodeRED, then data can be sent to external platforms.

---

Revision #2

Created 25 February 2025 10:24:22 by Yogesh

Updated 28 February 2025 16:01:42 by Yogesh