

# AMB-8I-4O

The AMB-8I-4O input/output expander with Modbus RTU and IEC-60870-5-101 protocol support (under development). It has 8 isolated digital inputs with voltage range up to 30VDC and 4 relay output with 5A 230V range and NO contacts. The power supply range is 8 to 48V DC. The use of DC / DC technology for supplying relays enables a wide range of supply voltages.

Please read carefully before starting. Also read the product [safety information](#).

- [General information](#)
- [Configuration Manual](#)
  - [Configuration IEC60870](#)
  - [Configuration Modbus](#)
- [Safety information](#)

# General information


[Download technical specification](#)

[Technical Specification](#)

The AMB-8I-4O input/output expander with Modbus RTU and IEC-60870-5-101 protocol support. (under development). It has 8 isolated digital inputs with voltage range up to 30VDC and 4 relay output with 5A 230V range and NO contacts. The power supply range is 8 to 48V DC. The use of DC / DC technology for supplying relays enables a wide range of supply voltages.

## Connection information

Below is a description of the expander connectors. The outputs of the expander are directly connected to the relay leads. The relays are of normal open type.

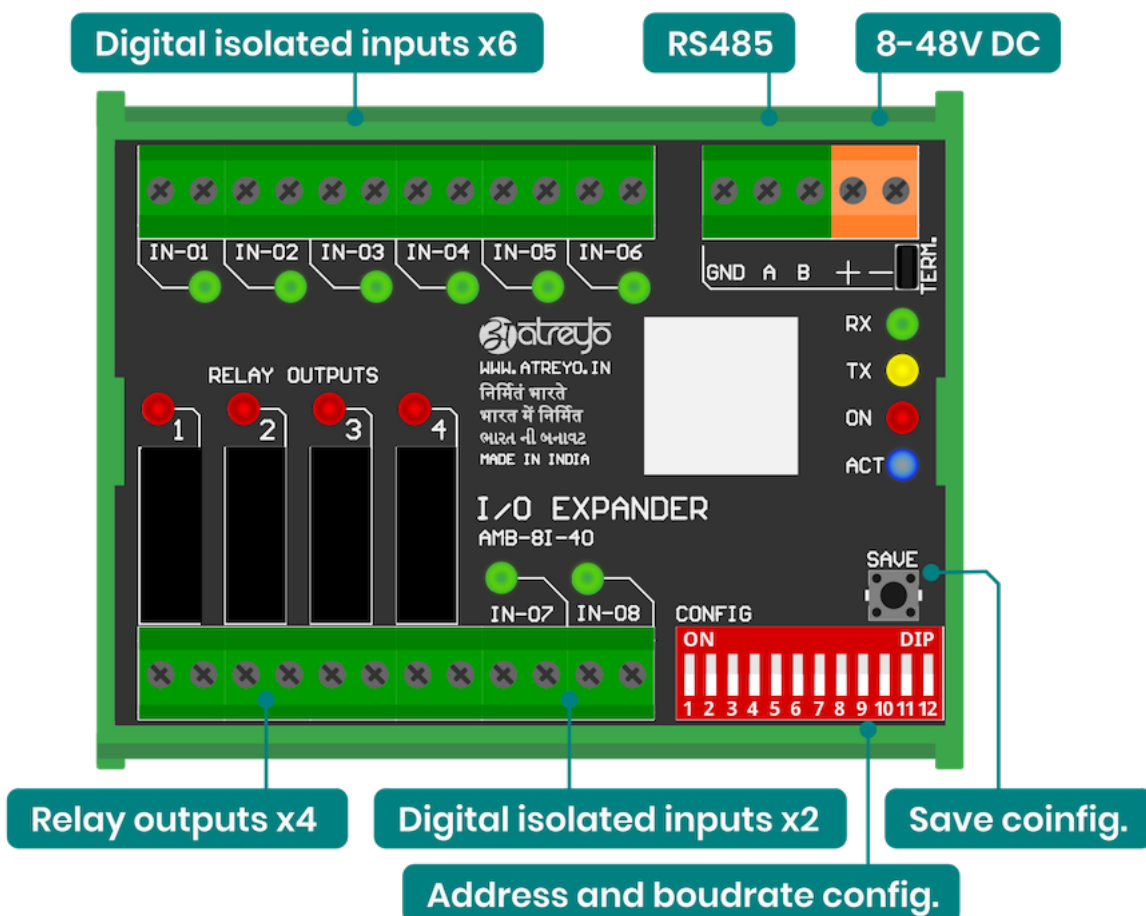


## Wiring

The expander has opto-isolated inputs that require an external voltage source in range of a 5-30V. The inputs can be driven by both positive and negative signals, this means that they can be controlled in both PNP and NPN systems. Both examples are shown in the attached diagram.


The outputs of the expander are directly connected to the relay leads. The relays are of normal open type.

## NPN wiring example

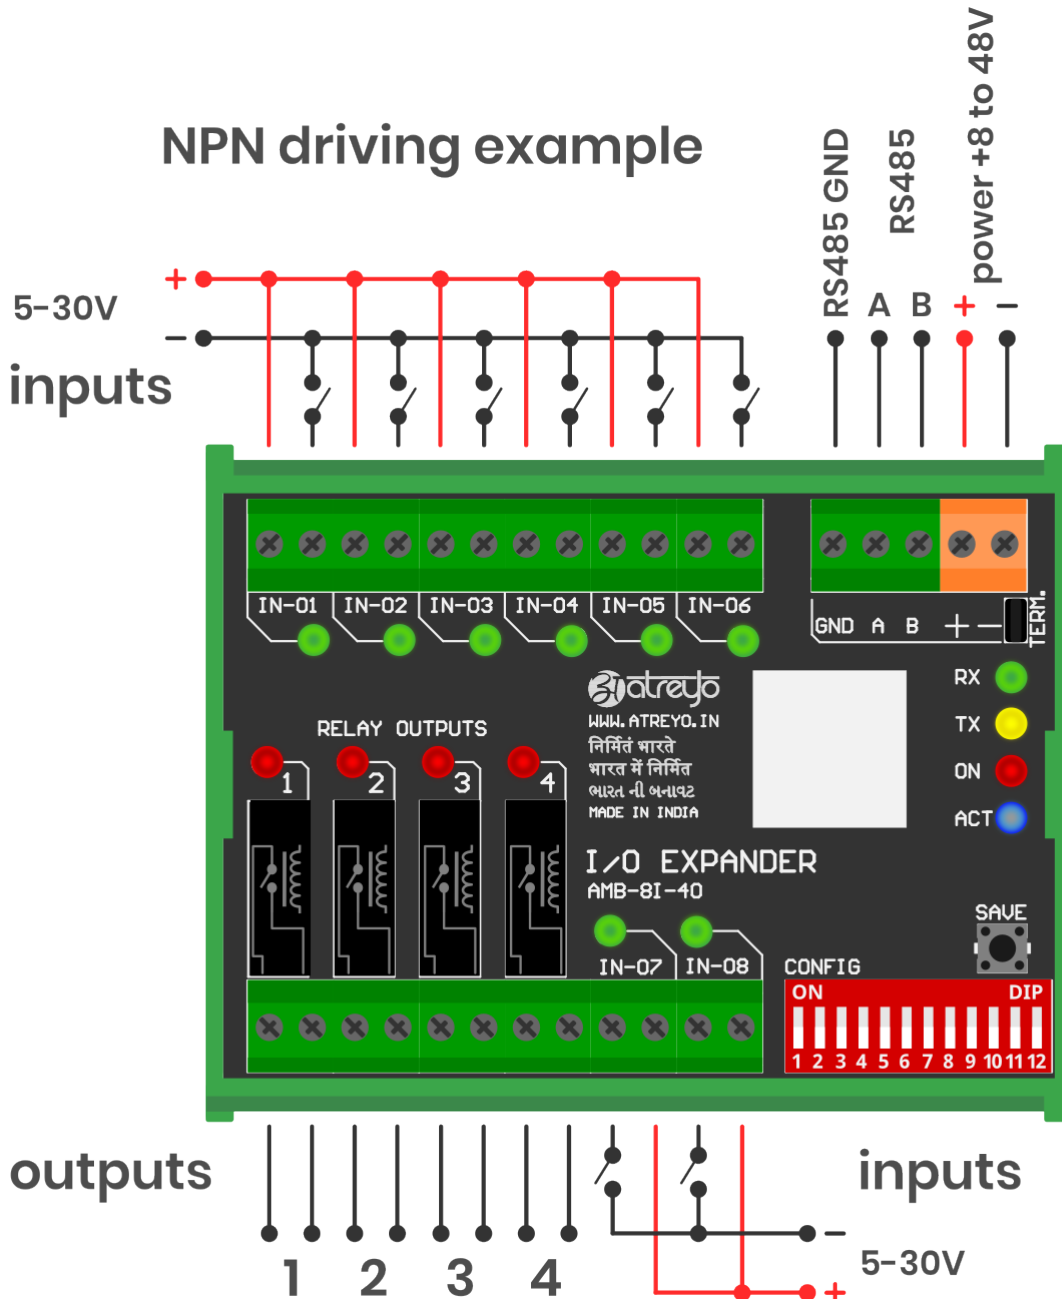

## PNP drivig example

# PNP driving example

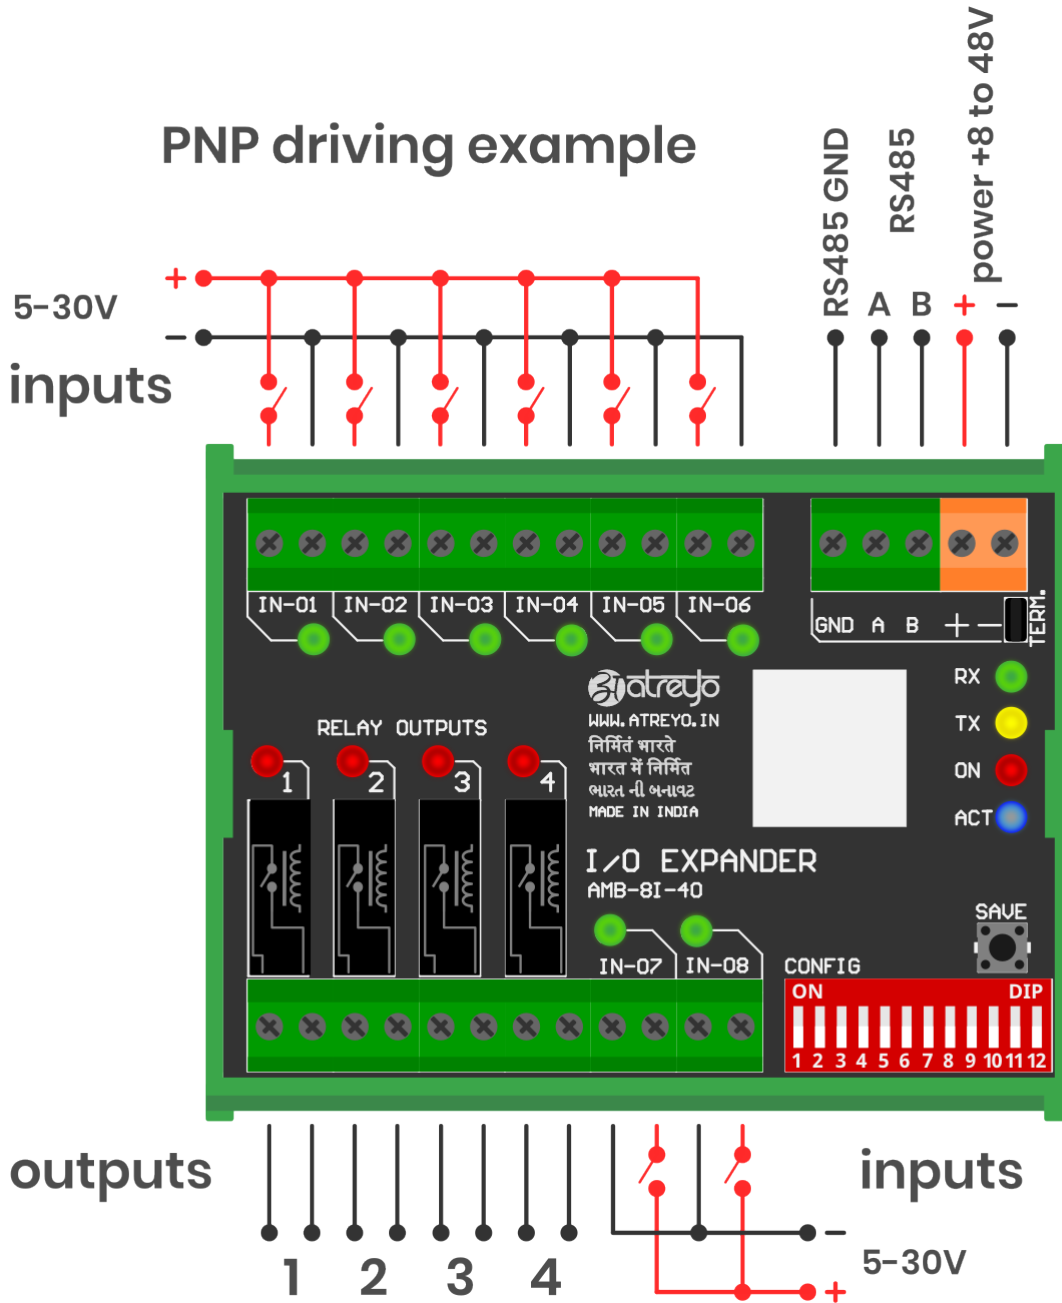

It is possible to combine any input in any mode. One can be NPN and the other PNP, as all inputs are independent.

# Configuration Manual


## Configuration

AMB-8I-4O is an I/O expander operating over Modbus RTU and IEC60870-5-101 protocol. The first DIP switch is used to switch between Modbus RTU and IEC modes. If it is in position 0, then the AMB is operating in Modbus RTU mode. If it is in position 1, then it works in the IEC protocol. As the two protocols have different functions, the DIP switch is also different. In IEC mode, the last DIP switch is used to change the operating mode from balanced/unbalanced. To save the DIP switch settings in the internal memory, the SAVE button must be pressed.

# Configuration IEC60870

## DIP switch configuration

This is DIP switch functions diagram for Modbus RTU configuration. For enable IEC60870 protocol 1 switch should be in ON position.

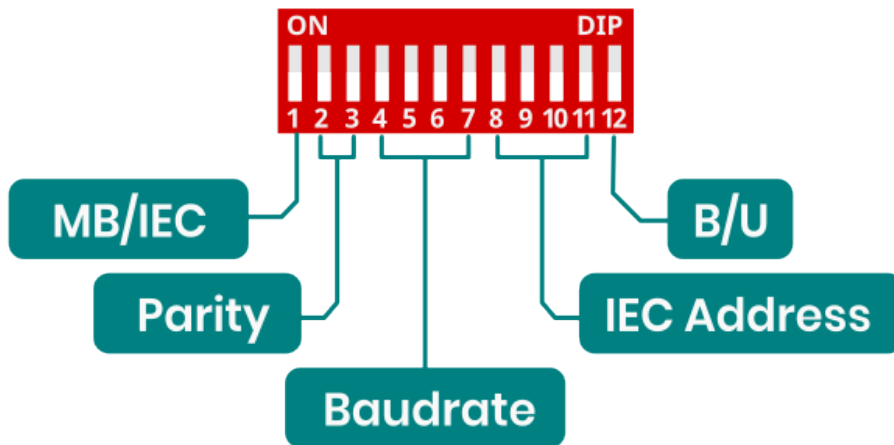

## Parity configuration

Parity configuration for both Modbus and IEC.

Parity	Function
00	NONE
01	ODD
10	EVEN
11	NONE

## Baudrate configuration

Baudrate configuration for both Modbus and IEC

Switch	Baudrate
--------	----------

0000	9600
0001	1200
0010	2400
0011	4800
0100	14400
0101	19200
0110	28800
0111	38400
1000	57600
1001	76800
1010	115200
1011	230400
1100	256000
1101	460800
1110	576000
1111	921600

## Address configuration for IEC

Switch	Value	IEC Address
0000	0	1
0001	1	2
0010	2	3
0011	3	4
0100	4	5
0101	5	6
0110	6	7
0111	7	10

Switch	Value	IEC Address
1000	8	20
1001	9	30
1010	10	40
1011	11	50
1100	12	60
1101	13	70
1110	14	80
1111	15	90

## EC60870-5-101 Implementation Guide

### Protocol Overview

The device implements IEC60870-5-101 protocol with the following key functions:

### Reading States (Interrogation)

- C\_IC\_NA\_1 (100)
- Reading all inputs and outputs states
  - Inputs: 1000-1007
  - Outputs: 2000-2003

### Controlling Outputs

- Function: C\_SC\_NA\_1 (45)
- Purpose: Setting individual output states
- IOA range: 2000-2003
- Values: ON (1) / OFF (0)

## Command Structure

### General Interrogation Command

Type ID: 100 (C\_IC\_NA\_1)  
Qualifier: 20  
Cause of Transmission: 6 (Activation)  
Common Address: 1

## Single Command (Output Control)

Type ID: 45 (C\_SC\_NA\_1)  
Cause of Transmission: 6 (Activation)  
Common Address: 1  
IOA: 2000-2003  
Value: 0/1

## SCADA system configuration

### IEC60870-5-101 Protocol Configuration

- Common Address (ASDU): 1
- Frame format: FT1.2
- Link Layer Address: according to device configuration

### I/O Points Configuration:

For inputs (8 channels):

- Type: Single Point Information (M\_SP\_NA\_1)
- IOA addresses: 1000-1007
- Direction: Monitoring (read)

For outputs (4 channels):

- Type: Single Command (C\_SC\_NA\_1)
- IOA addresses: 2000-2003
- Direction: Control (write)

Verification:


- Check if input states are correctly read (IOA 1000-1007)
- Confirm control operation for each output (IOA 2000-2003)
- Verify device responds to General Interrogation



# Configuration Modbus

## DIP switch configuration

This is DIP switch functions diagram for Modbus RTU configuration. For enable Modbus RTU protocol 1 switch should be in OFF position.

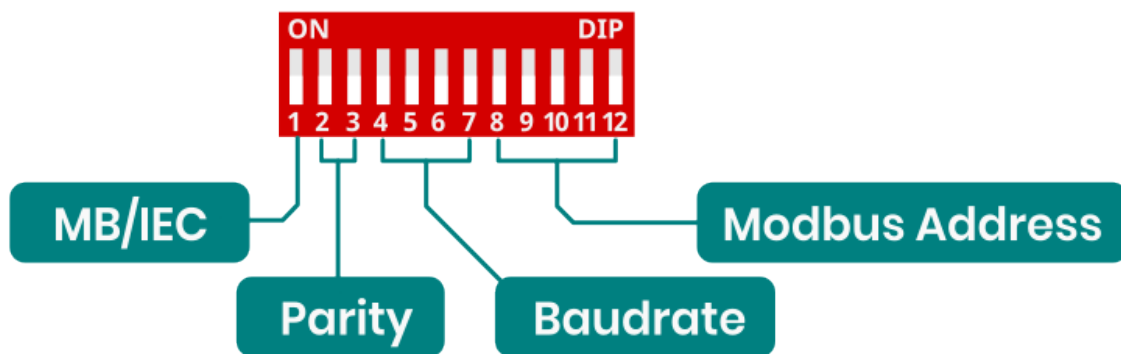

## Baudrate configuration

Baudrate configuration for both Modbus and IEC

Switch	Baudrate
0000	9600
0001	1200
0010	2400
0011	4800
0100	14400
0101	19200
0110	28800
0111	38400

Switch	Baudrate
1000	57600
1001	76800
1010	115200
1011	230400
1100	256000
1101	460800
1110	576000
1111	921600

## Address configuration for Modbus RTU

Switch	Value	Modbus Address
00000	0	1
00001	1	2
00010	2	3
00011	3	4
00100	4	5
00101	5	6
00110	6	7
00111	7	10
01000	8	20
01001	9	30
01010	10	40
01011	11	50

Switch	Value	Modbus Address
01100	12	60
01101	13	70
01110	14	80
01111	15	90
10000	16	100
10001	17	110
10010	18	120
10011	19	130
10100	20	140
10101	21	150
10110	22	160
10111	23	170
11000	24	180
11001	25	190
11010	26	200
11011	27	210
11100	28	220
11101	29	230
11110	30	240
11111	31	250

Address 1-247 → valid slave IDs for individual devices

Address 0 → reserved for broadcast messages; all slaves receive it but no one replies

Addresses 248-255 → reserved/unassigned (not permitted for standard device addressing)

# Safety information

## Operating environment

- The device is designed to be installed in clean, dust-free and insect-free places
- Operating temperature: -25 ~ 65°C (-13 ~ 149°F).
- Humidity range is 10% to 95% (non-condensing). Use the device in a dry environment.
- Away from heat sources and direct sunlight.
- It must not be exposed to acid fumes, salts and other chemicals.
- The device must not be used in places where there is a risk of gas explosion.

This is open type device intended for installation in a final casing/panel that offers mechanical protection and protection against the spread of fire.

Use in inappropriate conditions may damage the device or shorten its life.

## Electrical and power supply safety

- The device is powered with a voltage in the range of 8-48V. Voltage up to 24V is considered safe. Be especially careful when supplying them with higher voltages.
- Use only approved accessories
- Use the supplied power adapter or a good quality certified power adapter with the correct supply voltage range and sufficient power.
- Only use approved accessories like antenna etc.

Only a person with qualification and appropriate knowledge should install the device.

## Malfunctioning and damaged device

- Do not disassemble the device.
- Only qualified personnel must service or repair the device or its accessories.
- If water or other liquid has got into the device, or if it looks mechanically damaged, do not connect the device, but take it to an authorized service center.

## What to do and what not to do

- You are solely responsible for the use of the device and any consequences of its use.

- Do not store or use the device in harsh environments such as dust, gases, oils, chemical vapors and damp places.
- Do not throw the device and its accessories. Handle with care.
- The device heats up during operation. Ensure proper ventilation.
- If you need to dispose of your device, check your local regulations for recycling and disposal of electronics.
- Route power, Ethernet, and antenna cables properly so that they cannot be accidentally pulled out.
- The device should be used and kept away from small children.