

Thermolog

Thermolog V3-T is temperature logger dedicated for applications where visual temperature control is needed and it is also necessary to save log to non-volatile memory. Thermolog V3-T has the ability to set the range of the permissible temperature. An alarm is triggered above and below the set temperature. Thermolog V3-T supports the DS12B20 sensor but has optional PT100 sensor support.

Thermolog V3-TH is temperature and humidity logger dedicated to applications where visual temperature control is needed and it is also necessary to save log to non-volatile memory. Thermolog V3-TH has the ability to set the range of the permissible temperature. An alarm is triggered above and below the set temperature.

- [General information](#)
- [Configuration manual](#)
- [Protocol Description](#)
- [Safety information](#)


General information

Download technical specification Thermolog V3-T	Technical Specification
Download technical specification Thermolog V3-TH	Technical Specification

Connection

The thermologist on the right has a set of sockets for power and sensor connections. Below is a description of the sockets.

- **RS485** is used to connect to a Modbus master, i.e. to an IoT gateway, computer or PLC.
- **Push buttons** are used to configure Thermolog and change the way the danyuch is displayed
- In place of the **digital sensor**, depending on the Thermolog version, either a temperature sensor or a temperature and humidity sensor is connected.
- The **Alert output** is connected to either an optional sound or a sound/visual signaling device. The circuit is in NO/NC form and can control 230V mains voltage up to a maximum of 3A.
- Thermokupule input is adapted to 2-wire PT100 only in the version of Thermolog that supports this sensor

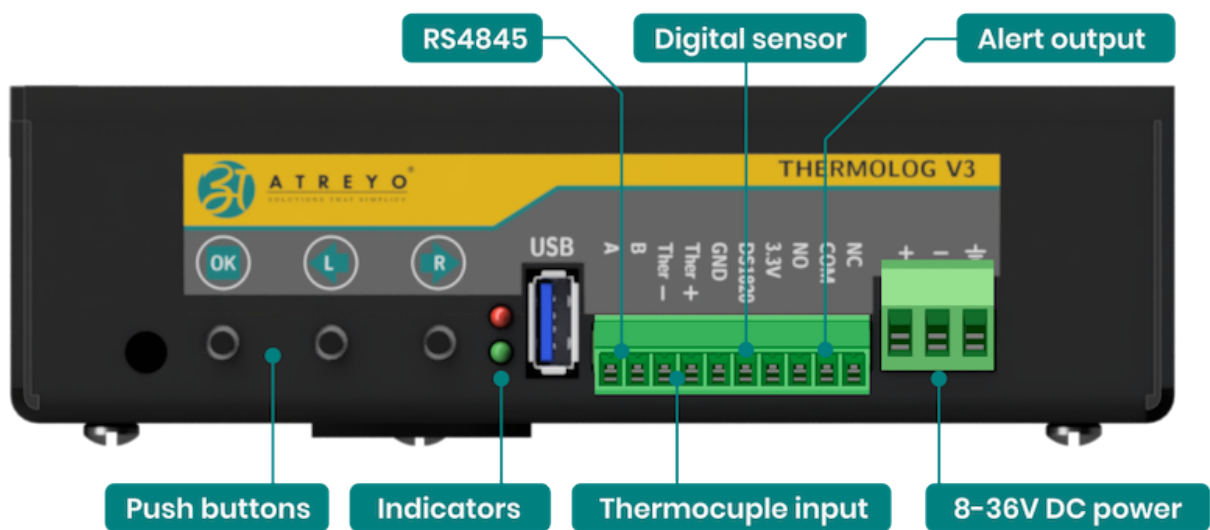

Copy data of Logger

Copying the data of the built-in logger is done with a USB pendrive. To do this, insert a pendrive formatted in FAT32 and restart the device. Thermolog will automatically start copying data to it after detecting the pendrive. The display will show information about the progress of copying.

Once copied, the file on the flash drive will be named **Termdump.BIN**

To open it you need to use a dedicated PC program - **Thermometer**.

Firmware update

Thermolog enables firmware updates. For this purpose, you need a flash drive formatted in **FAT32**. On the flash drive you should copy the firmware to Thermolog. The firmware must be named **atgfirmware.bin**.

1. Insert a pendrive
2. Simultaneously press all 3 buttons
3. Turn on the power. The display will show Bootloader.
4. After a while it will display "press any key" Then press the "L" button
5. In a dozen seconds the firmware will update and Thermolog will reboot.

Configuration manual

Thermolog can be configured in two ways. One by using the buttons and the menu that will appear on the display, or by using Modbus and commands from the dedicated **Thermometer PC application** or any other software with Modbus function. The offered device has default parameters and you should set them according to your requirements.

It is possible to configure:

- the display method
- brightness from 1 to 15 or automatic
- Modbus parameters
- date and time
- sensor calibration

Configuration by buttons

Setting the time on the Thermolog ATL-V3-TH:

- Long press the OK button to enter the time setting mode.
- Use the Left (L) and Right (R) buttons to adjust the time.
- Single press the OK button to switch between setting up minutes, hours, days, and so on.
- This allows you to easily navigate through the different time units and adjust them accordingly.

Attention. Thermolog has the ability to calibrate the clock. In the last menu there is the possibility of acceleration and deceleration. It is best to leave the values as the default, which is 0.

Switching the display mode:

- Press either the Right (R) or Left (L) button.

Setting Brightness of display and Modbus Parameter:

- Press the OK button along with the Right (R) button to set Modbus address, baudrate, parity, stop bit and also set brightness to manual or auto.
- Use the Left (L) and Right (R) buttons to adjust the parameter.
- Single press the OK button to switch between parameters.

Setting temperature and humidity alert:


- To set the minimum or maximum temperature of the sensor for low or high temperatures, use the OK button along with the Left (L) button.
- Use the Left (L) and Right (R) buttons to adjust the temperature.
- Single press the OK button to switch between low and high temperature.

Using the program on a PC

Thermolog has a dedicated application that makes configuration easy and allows exporting LOG files to Excel format. Thermometer 1.04 does not require installation. It works on computers running Windows 10 and later.


Setting up Thermolog with the Thermometer App

To configure Thermolog, you need to connect a converter to RS485 interface to the USB port of your computer. You can use ADI-501 converter made by Atreyo or any other make. After correctly connecting the RS485 signals between the converter and Thermolog and after connecting to the computer, start the Thermometer application. Then select the port and serial port parameters. By default, Thermolog is set to Baud rate 9600, Data bits 8, Parity: none, Stop bits: 1, Flow control: none.

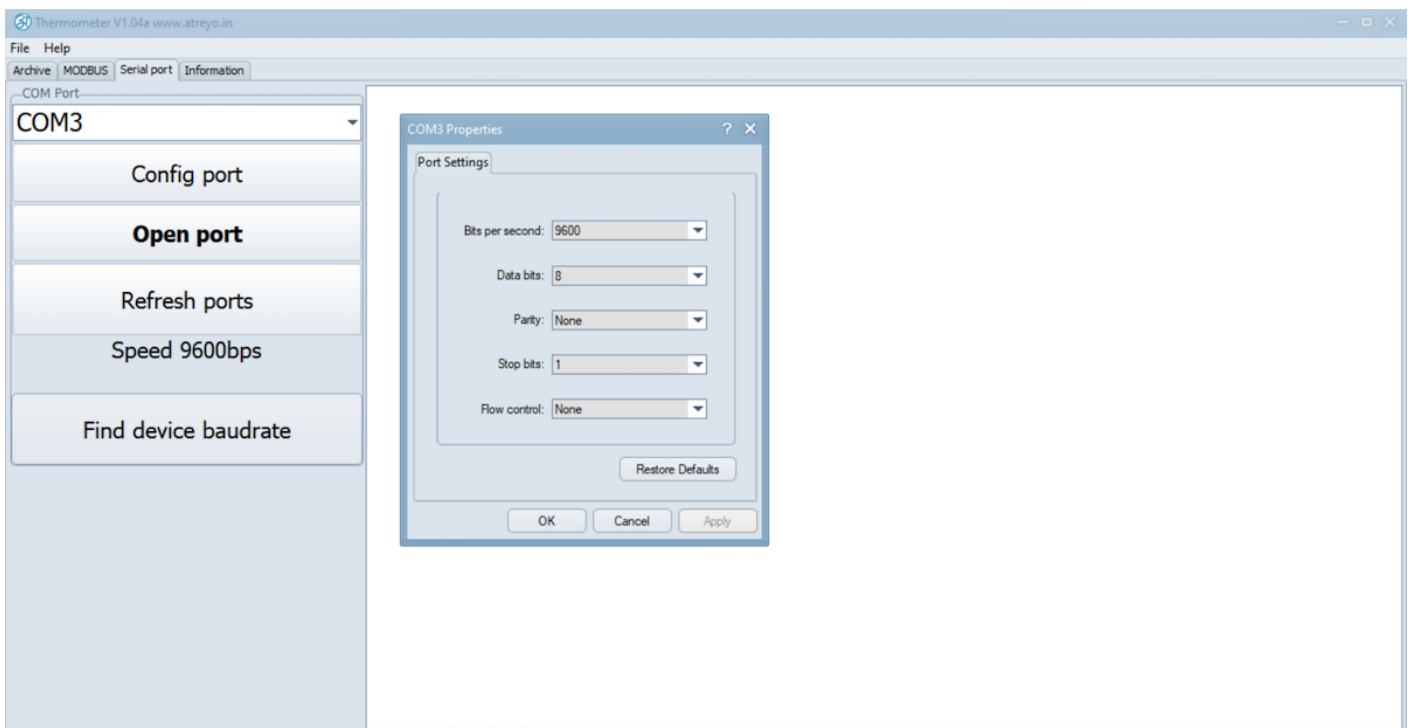


After making the settings, click **Open port**.

Under **Modbus>Redable registers**, we have access to the data read from Thermolog.

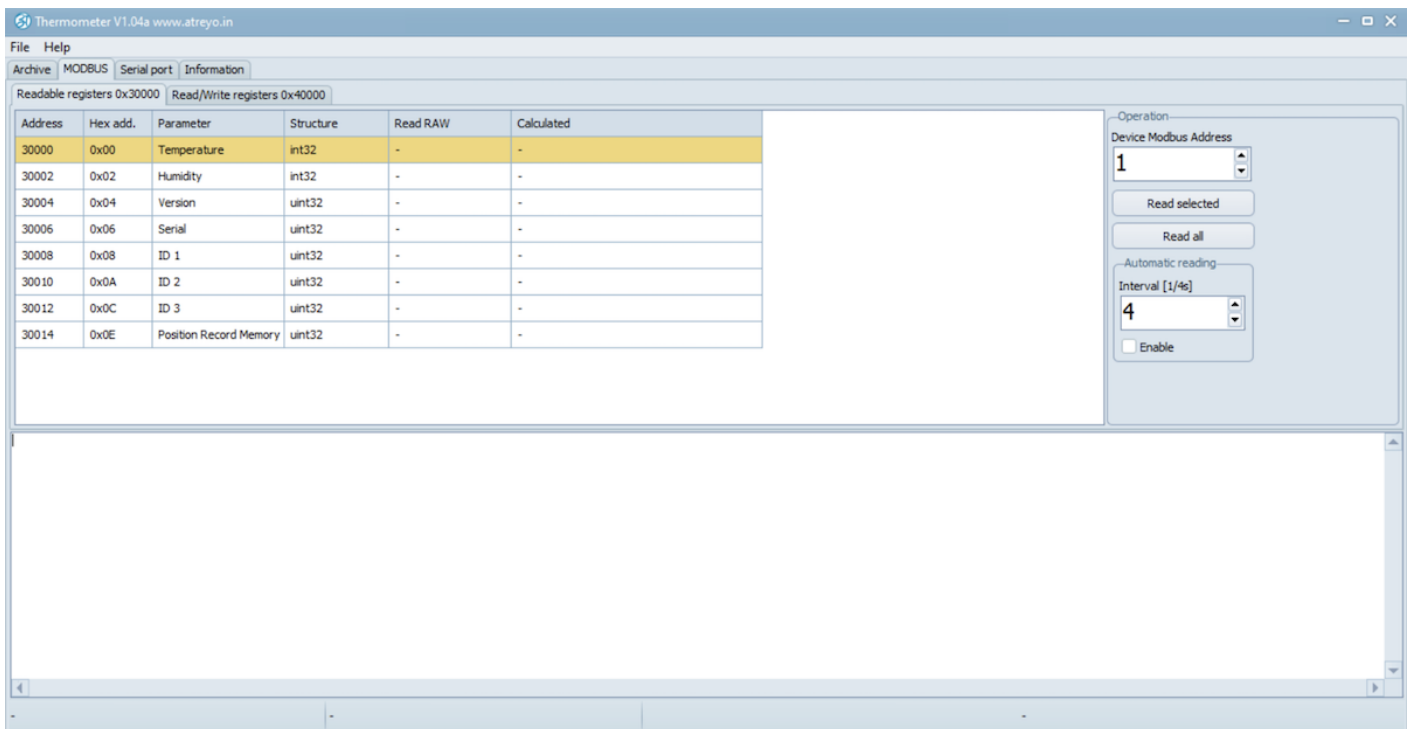

Under **Modbus>Read/Write**, we also have the option to make changes to the settings. We can make config of:


- time and date
- temperature alarm range
- humidity alarm range
- make calibration
- set the serial port and Modbus address

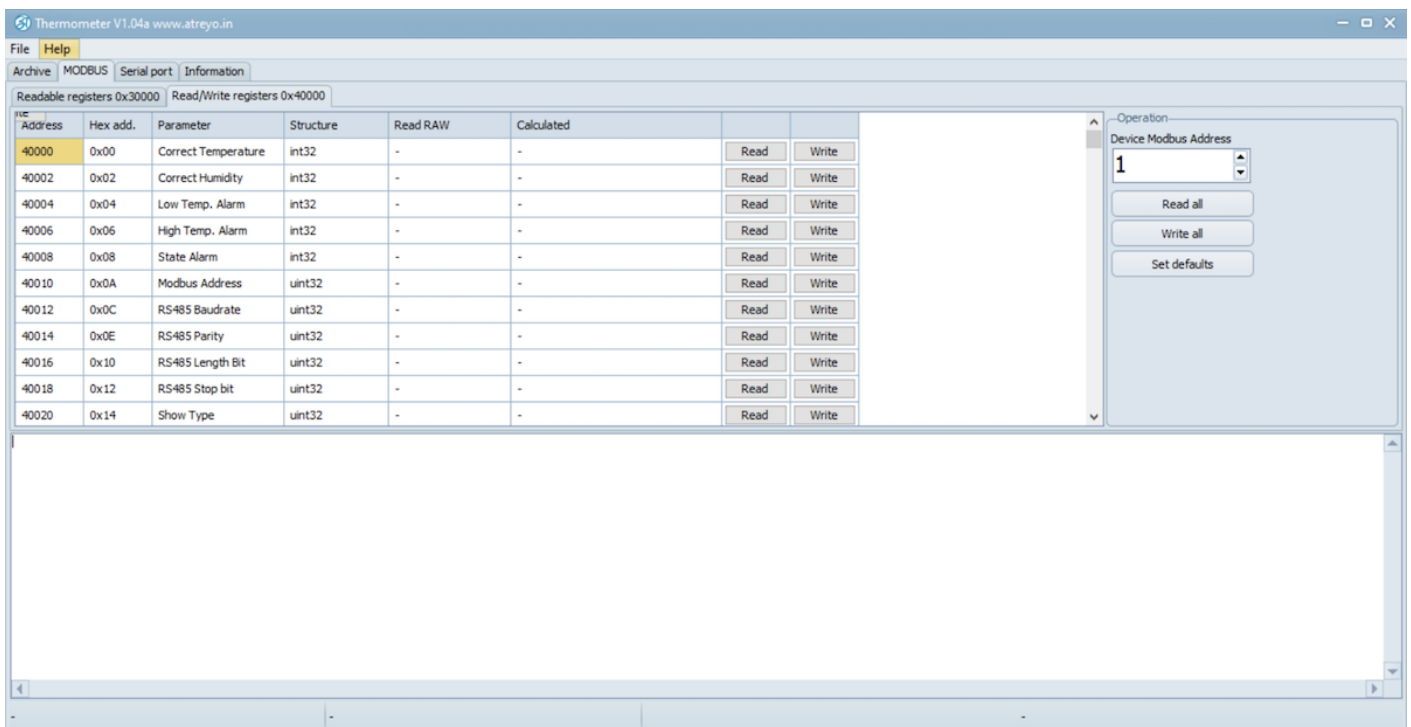

Preview data and export to Excel

To open a preview of data from Thermolog, you need to select File>open in the top menu and open the previously ripped Termdump.BIN file. A graphical representation of the temperature measurements will be shown.

To export data to an Excel file, it is necessary to have Excel installed on your computer.

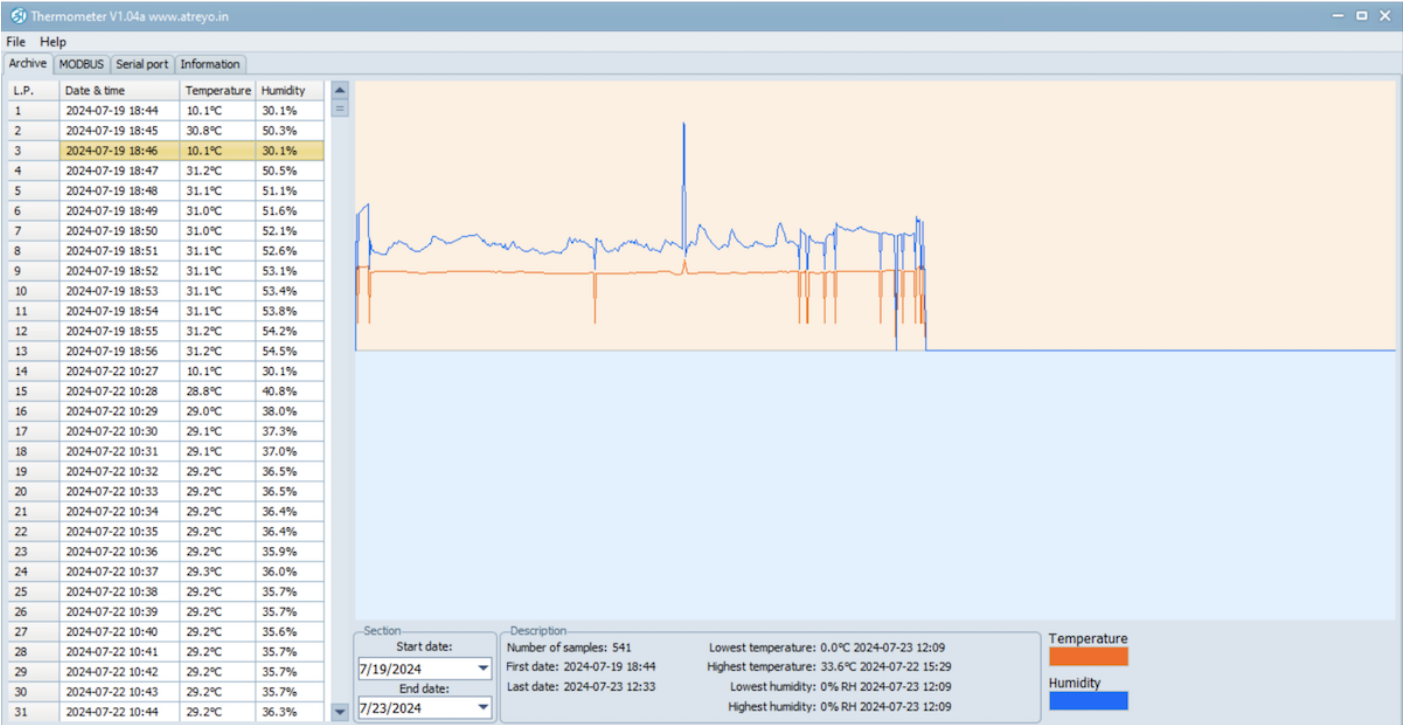

Protocol Description

Thermolog sends data using the Modbus proto protocol. Below is a description of the protocol.

Readable registers 0x04 - 30000						
Address	Hex Address	Parameter	Organization	Example Value	Accuracy	Example
30000	0x00	Temperature	int32	152	%0.1f	15.2 °C
30002	0x02	Humidity	int32	457	%0.1f	45.7 %
30004	0x04	Version	uint32	20201	%d.%02d.%02d	2.02.01
30006	0x06	Serial	uint32	7EF8E955	%08X	0x7EF8E955
30008	0x08	ID 1	uint32	05D3FF31	%08X	05D3FF313838553443134350
30010	0x0A	ID 2	uint32	38385534	%08X	
30012	0x0C	ID 3	uint32	43134350	%08X	
30014	0x0E	Position Record Memory	uint32	34897	%d	34897

Readable/Writable registers 0x03 - 40000									
Address	Hex Address	Parameter	Organization	Example Value	Accuracy	Example	Val. Min	Val.Max	Default
40000	0x00	Correct Temperature	int32	-12	%0.1f	-1.2	-100	100	0
40002	0x02	Correct Humidity	int32	25	%0.1f	2.5	-100	100	0
40004	0x04	Low Temp. Alarm	int32	-25	%0.1f	-2.5	-1200	1200	-1.5
40006	0x06	High Temp. Alarm	int32	20	%0.1f	3.0	-1200	1200	3.6

Readable/Writable registers 0x03 - 40000									
Address	Hex Address	Parameter	Organization	Example Value	Accuracy	Example	Val. Min	Val.Max	Default
40008	0x08	State Alarm	int32	0	%d	0	0	2	0
40010	0x0A	Modbus Address	uint32	1	%d	1	1	247	1
40012	0x0C	RS485 Baudrate	uint32	9600	%d	9600	1200	921600	9600
40014	0x0E	RS485 Parity	uint32	0	%d	0	0	2	0
40016	0x10	RS485 Length Bit	uint32	8	%d	8	8	9	8
40018	0x12	RS485 Stop bit	uint32	1	%d	1	0	3	1
40020	0x14	Show Type	uint32	1	%d	1	1	6	1
40022	0x16	Correct Time	int32	-13	%0.1f	-13	-120	120	-11
40024	0x18	Light	uint32	-	%d	-	0	15	0
40026	0x1A	Year	uint32	1022	%d	1022	2022	2099	-
40028	0x1C	Month	uint32	9	%d	9	1	12	-
40030	0x1E	Day	uint32	3	%d	3	1	29/30/31	-
40032	0x20	Hour	uint32	15	%d	15	0	23	-
40034	0x22	Minute	uint32	12	%d	12	0	59	-
40036	0x24	Second	uint32	33	%d	33	0	59	-

Correct temperature - each temperature reading is corrected by this value	
Correct Humidity - each humidity reading is corrected for this value	
Low Temp. Alarm - when the temperature is lower than this value, the alarm will be triggered	
High Temp. Alarm - when the temperature is higher than this value, the alarm will be triggered	
State Alarm - there are three alarm states	
ALARM_NONE	0
ALARMYELLOW	1
ALARMRED	2

Show type - determines how the temperature, humidity and time are shown on the LED display
Correct time - after the end of the day, the time was adjusted by this value
Light - brightness level of the LED display. For value 0 - the automatic brightness function is enabled.
Identification Device - ID1+ID2+ID3 - unique value for each device
Position Record Memory - position in the internal memory organization of the device for archiving the measured temperatures

Communication over Modbus

Name	Function	Value
RS485 Baudrate	From 1200 to 921600	9600
RS485 Parity	None	0
	Odd	1
	Even	2
RS485 Length Bit	Normal	8
	Extend	9
RS485 Stop bit	0.5	0
	0	1
	1.5	2
	2	3

Safety information

Operating environment

- The device is designed to be installed in clean, dust-free and insect-free places
- Operating temperature: -25 ~ 65°C (-13 ~ 149°F).
- Humidity range is 10% to 95% (non-condensing). Use the device in a dry environment.
- Away from heat sources and direct sunlight.
- It must not be exposed to acid fumes, salts and other chemicals.
- The device must not be used in places where there is a risk of gas explosion.

Use in inappropriate conditions may damage the device or shorten its life.

Electrical and power supply safety

- The device is powered with a voltage in the range of 8-36V. Voltage up to 24V is considered safe. Be especially careful when supplying them with higher voltages.
- Use only approved accessories
- Use the supplied power adapter or a good quality certified power adapter with the correct supply voltage range and sufficient power.
- Only use approved accessories like antenna etc.

Only a person with qualification and appropriate knowledge should install the device.

Malfunctioning and damaged device

- Do not disassemble the device.
- Only qualified personnel must service or repair the device or its accessories.
- If water or other liquid has got into the device, or if it looks mechanically damaged, do not connect the device, but take it to an authorized service center.

What to do and what not to do

- You are solely responsible for the use of the device and any consequences of its use.
- Do not store or use the device in harsh environments such as dust, gases, oils, chemical vapors and damp places.
- Do not throw the device and its accessories. Handle with care.
- The device heats up during operation. Ensure proper ventilation.
- If you need to dispose of your device, check your local regulations for recycling and disposal of electronics.

- Route power, Ethernet, and antenna cables properly so that they cannot be accidentally pulled out.
- The device should be used and kept away from small children.