

General information

Download technical specification	Technical Specification
--	---

Model selection

Different Gateway models are available depending on the periphery availability and type.

Model	Cellular Network				GNSS	Internal memory	
AG-207	GPRS	3G	LTR 4G	5G		Flash 64MB	NAND 512MB
AG-207						√	√
AG-207-LT-IN	√		√		√	√	√
AG-207-LT-EU	√		√		√	√	√
AG-207-LT-GL	√	√	√		√	√	√

AG-207 is the basic variant of this model. Has a no cellular module.

The AG-207-LT-IN with LTE module. This module is to use in India.

The AG-207-LT-EU is the same as the base model except that it has a cellular module for use India and Europe.


The AG-207-LT-GL is a version with a module certified all over the world.

Hardware informations


The Gateway is made on one PCB, which is fitted to the aluminum housing. The housing is made of a thick, strong aluminum profile with two end plates also made from aluminum. The surface of the housing is finished by anodizing.

At the bottom of the housing there are slots through which DIN rail clamp or any other clamp can be mounted by t-nuts.

Top view dimensions

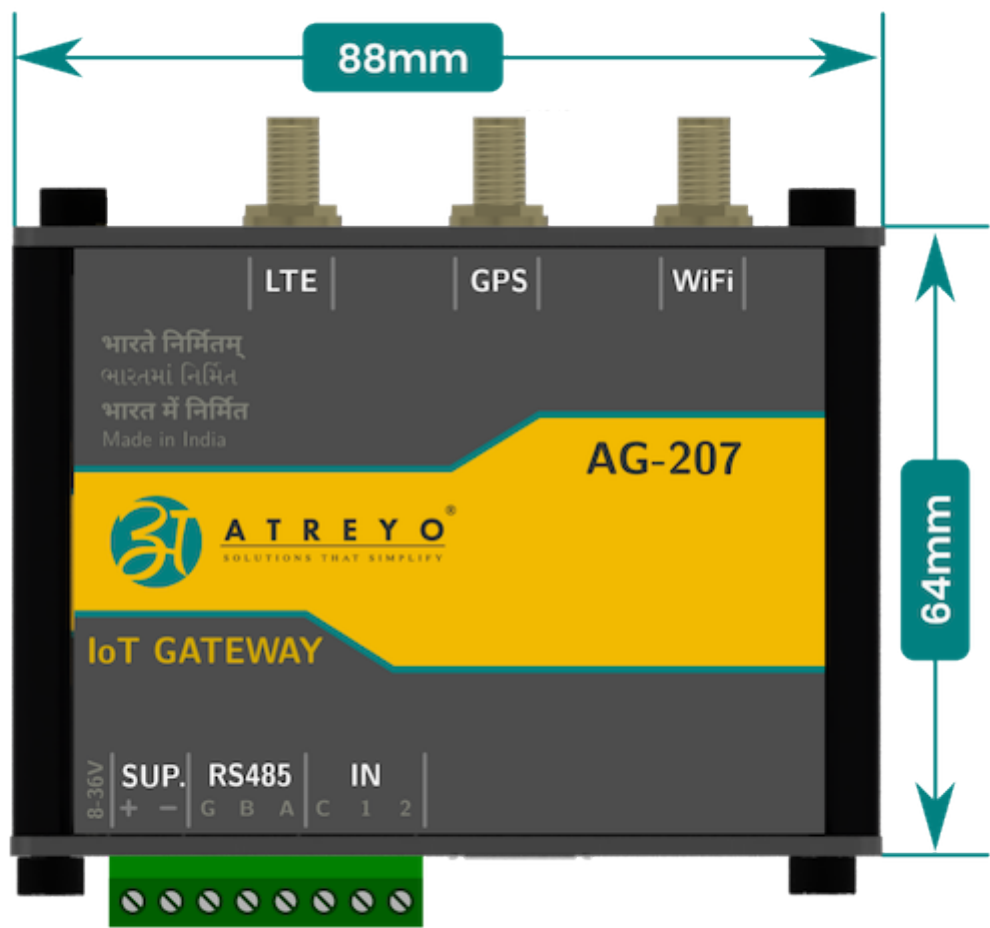



Side view dimensions

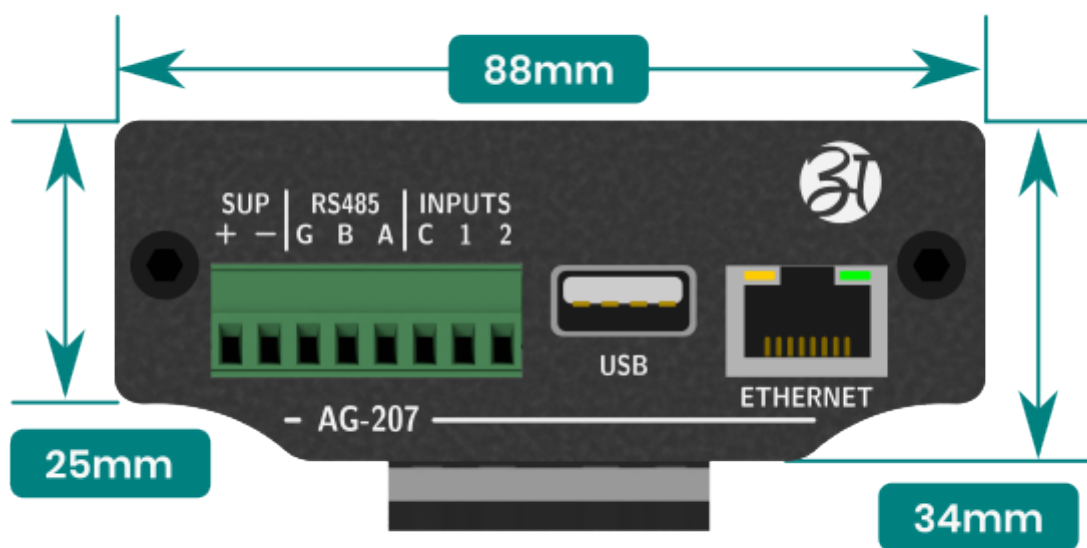

Connectors


Top view connectors and indicators

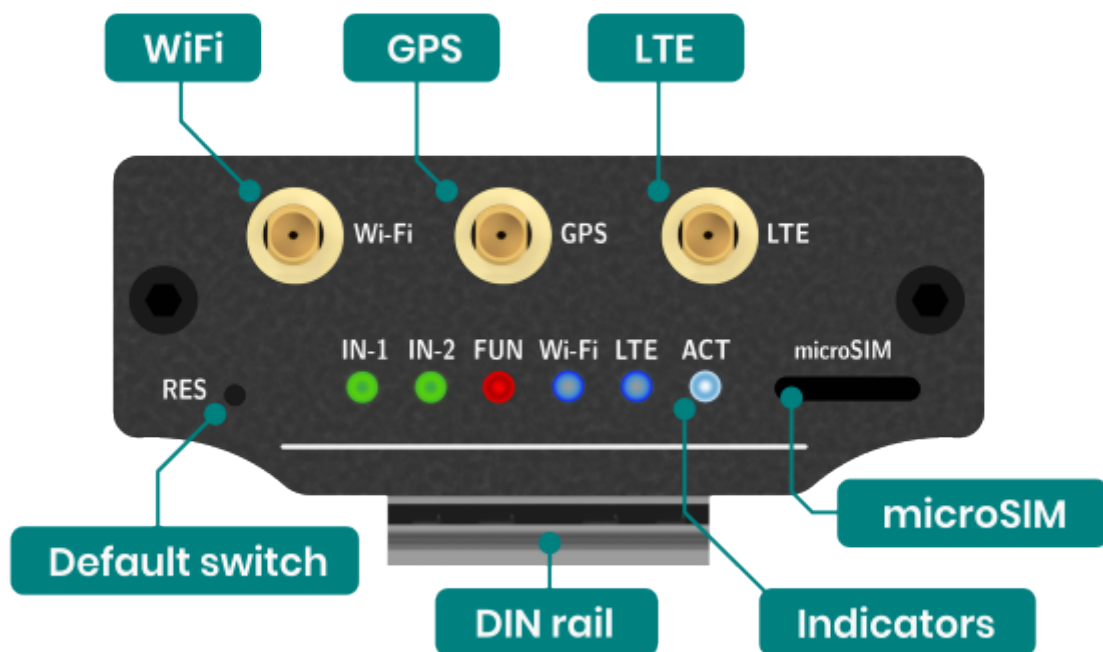

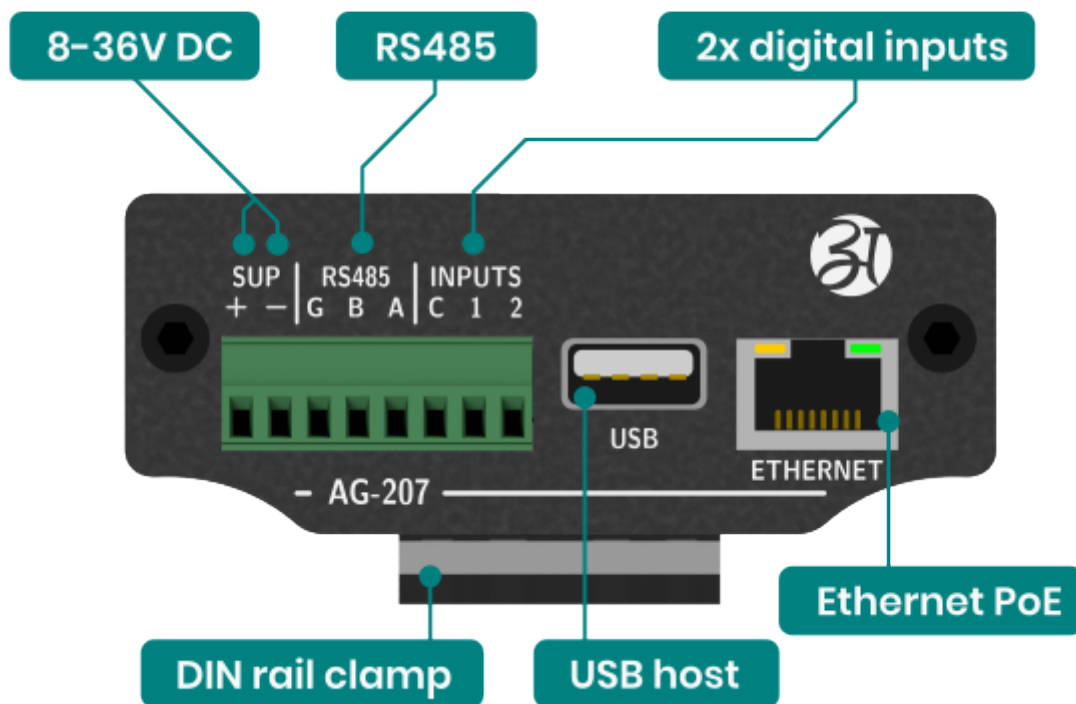


Block diagram

For a better understanding of the operation of the gateway, refer to the block diagram. Non-essential components have been omitted. Developers who program peripherals such as GPIOs, serial etc. will find information about them in the sections dedicated to such peripherals.

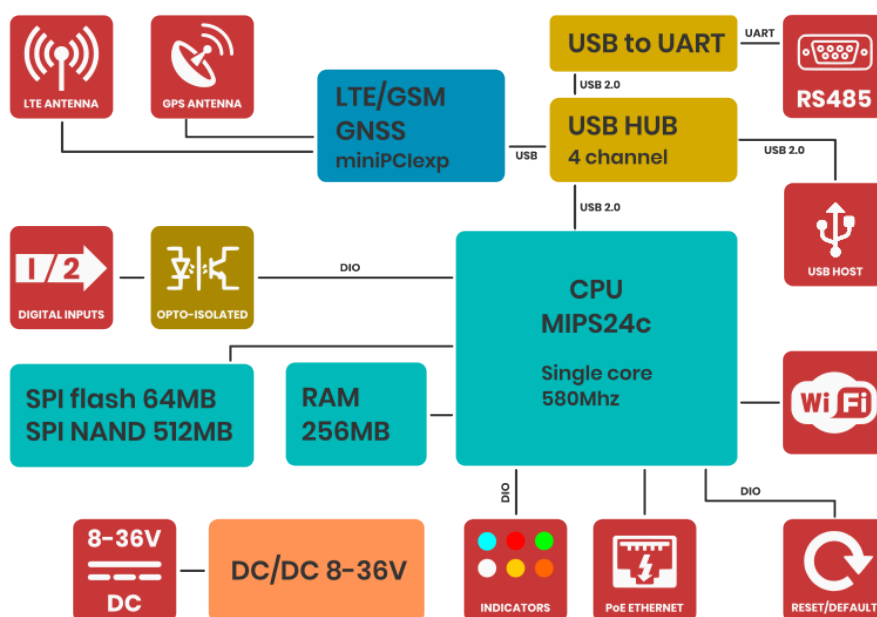

Power supply

The Gateway power supply range is 8-36V DC. First, connect the power supply according to the diagram. The Gateway is protected against reverse power connection. If the polarity is reversed, the Gateway will not start.

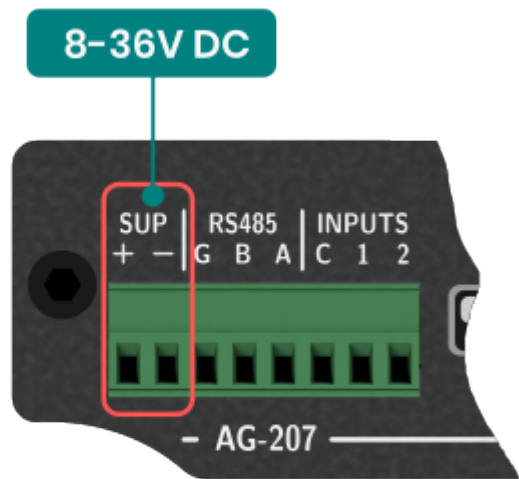

PoE

The Gateway can also be powered via PoE in the range of input power supply using unused pairs of wires in the LAN cable. Below is the pinout of the RJ45 socket.

Pin number	Function	Comment
1	RX+	Data
2	RX-	Data
3	TX+	Data
4	DC+	Power supply positive
5	DC+	Power supply positive
6	TX-	Data
7	DC-	Power supply negative
8	DC-	Power supply negative


LTE 4G modem

Generally, the Gateway supports all versions of Quectel MiniPCI express modems. However, you can use a third-party modem, as long as the signal outputs are compatible with those of the Quectel company. For use your LTE module, select model without LTE module installed. You also need to pay attention to the power supply to the LTE module should be 3.3V.

Mobile network signal strength is also displayed on 4 LED indicators.

MiniPCI express pinout

Below is the description of the PCI express pinout used in the AG-702. Before installing anything other than the EC200U or EG25, be sure to check the pinout for compatibility. The LTE model is connected via a USB data bus.

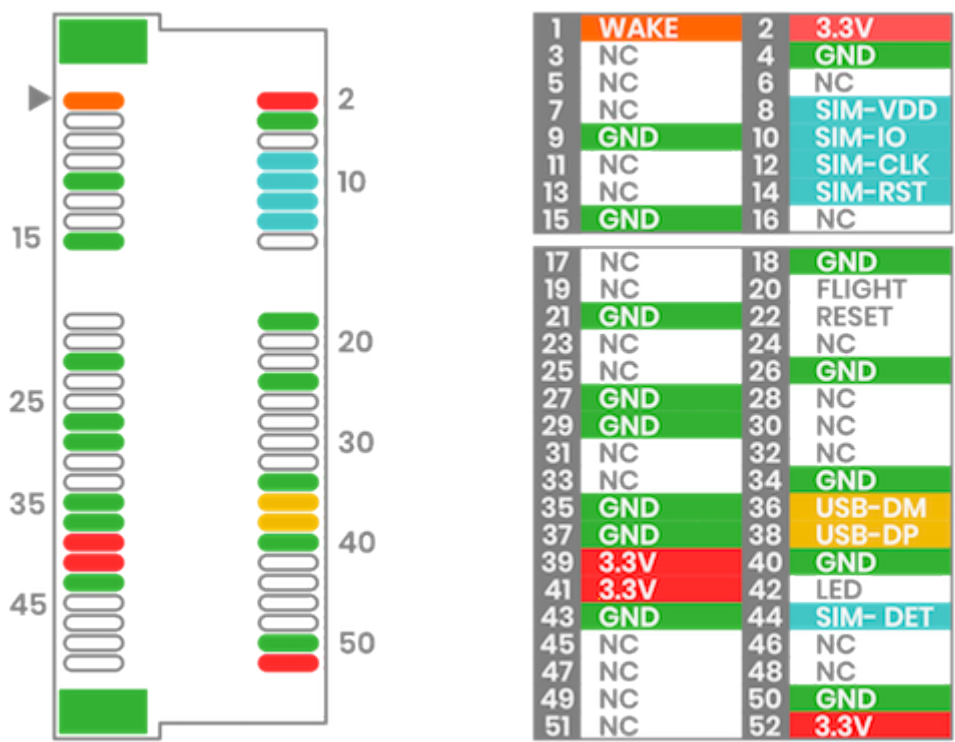

GNSS

Device has wboarded LTE modem along with GNSS function. In order to receive the GNSS signal, an antenna is required. There are two types of GNSS antennas: active gnss antenna and passive gnss antenna. The AG-702 supports both types of antennas, but in order for the active antenna to work properly, it is necessary to start powering the active antenna. To do this, you need to go to **System > Custom Commands** and select the command **Turn GPS antenna to active mode**.

AG-207

Dashboard

Status

System

System

Administration

ACL Settings

Software

Startup

Scheduled Tasks

Mount Points

LED Configuration

Backup / Flash Firmware

Custom Commands

Reboot

Modem

Services

Network

VPN

Statistics

Logout

DashboardConfigure

Custom Commands

Start modem

RUN SCRIPT COMMAND

Shutdown modem

RUN SCRIPT COMMAND

Format NAND and create as EXTROOT

RUN SCRIPT COMMAND

Delete EXTROOT from NAND

RUN SCRIPT COMMAND

Format NAND and mount as /nand in r...

RUN SCRIPT COMMAND

Restore NAND as EXTROOT

RUN SCRIPT COMMAND

Show mounted block devices

RUN SCRIPT COMMAND

Show space on mounted devices

RUN SCRIPT COMMAND

Test all LEDs

RUN SCRIPT COMMAND

List devices USB

RUN SCRIPT COMMAND

Turn GPS antenna to active mode

RUN SCRIPT COMMAND

Turn GPS antenna to passive mode

RUN SCRIPT COMMAND

Activate GPS on ttyUSB7

RUN SCRIPT COMMAND

Show GPS location

RUN SCRIPT COMMAND

Powered by LuCI Master (git-23.175.80454-4d5440a) / ArgonTheme v2.2.9.4 / Atrayo-OpenWrt 1.01 221019 unknown

Also on this page, you can test whether the GNSS is working properly. To do so, you need to click **Activate GPS on ttyUSB7** and then **Show GPS location**.

Ethernet

The gateway has one RJ45 ethernet ports with LED indicators. The speed of each is 100Mbps. Ethernet, IP and other settings are set on the **Network > Interfaces** page.

The default IP of ethernet is:
192.168.1.60

AG-207

Dashboard

Status

System

Modem

Services

Network

Interfaces

Wireless

Switch

Routing

DHCP and DNS

Diagnostics

Firewall

Topdump

VPN

Statistics

Logout

InterfacesDevicesGlobal network options

Interfaces

lan

br-lan

Protocol: Static address

Uptime: 1h 55m 31s

MAC: 32:54:52:70:B4:EC

RX: 0 B (0 Pkts.)

TX: 342 B (1 Pkts.)

IPv4: 192.168.1.1/24

IPv6: undefined/0

RESTART

STOP

EDIT

DELETE

lte

3g-lte

Protocol: UMTS/GPRS/EV-DO

RX: 0 B (0 Pkts.)

TX: 0 B (0 Pkts.)

Error: Network device is not present

RESTART

STOP

EDIT

DELETE

wan6

eth0.2

Protocol: Static address

Uptime: 1h 51m 59s

MAC: 32:54:52:70:B4:EC

RX: 3.92 MB (27520 Pkts.)

TX: 2.41 MB (3715 Pkts.)

IPv4: 192.168.10.87/24

IPv6: undefined/0

RESTART

STOP

EDIT

DELETE

ADD NEW INTERFACE...

SAVE & APPLY

SAVE

RESET

Powered by LuCI Master (git-23.175.80454-4d5440a) / ArgonTheme v2.2.9.4 / Atrayo-OpenWrt 1.01 221019 unknown

WiFi

The gateway has WiFi 2.4Ghz. By default, the WiFi is set as a hotspot and shares internet from Ethernet and from LTE via WiFi.

Serial Interface

The Gateway has one RS485.

RS485

The baudrate range for RS485 port (/dev/ttyUSB0) is 600 bps to 460800 bps. Note that with a longer cable, the maximum speed may drop. It is recommended to use special cables designed for RS485. The port is protected by high-power TVS diodes against electrical surges.

Digital Inputs

The Gateway has two digital inputs and one digital output.

Digital inputs

The digital inputs are completely independent optically isolated inputs that accept an input signal level of up to 30V DC. They have no common minus. They can be connected either with a common plus or minus. Can be controlled with open collector. They require to be powered. The range of the signal considered as a logical 1 is from 3.5V to the maximum input voltage.

Revision #5

Created 16 February 2025 08:59:33 by Admin

Updated 9 March 2025 09:44:16 by Admin